





// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P11

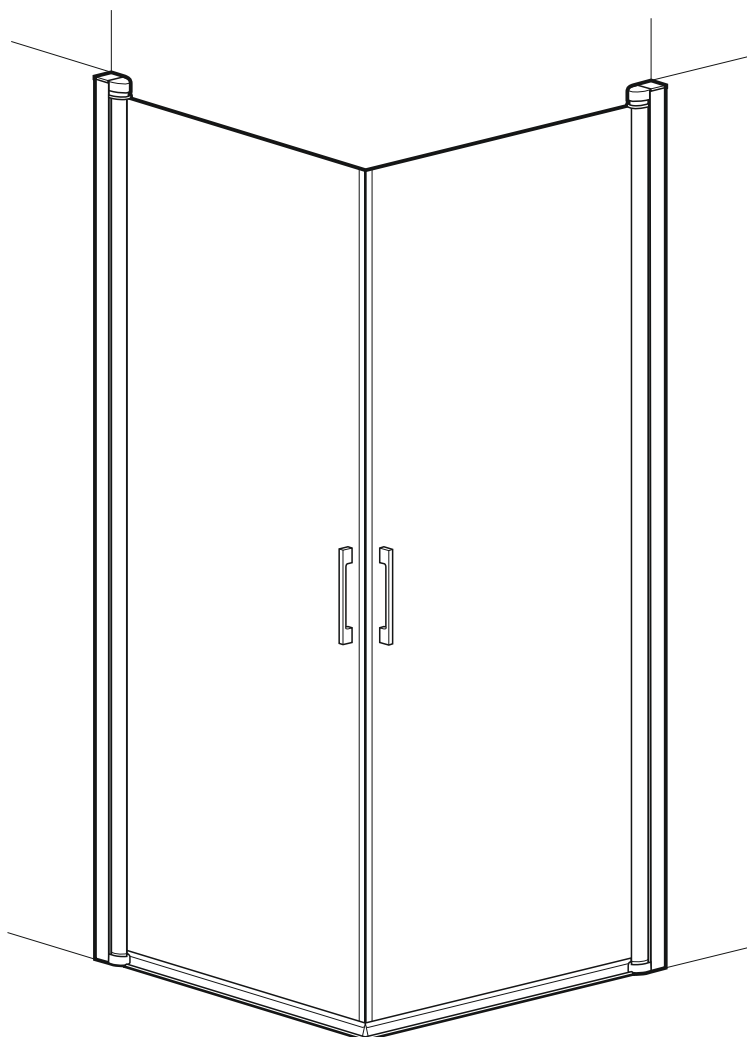


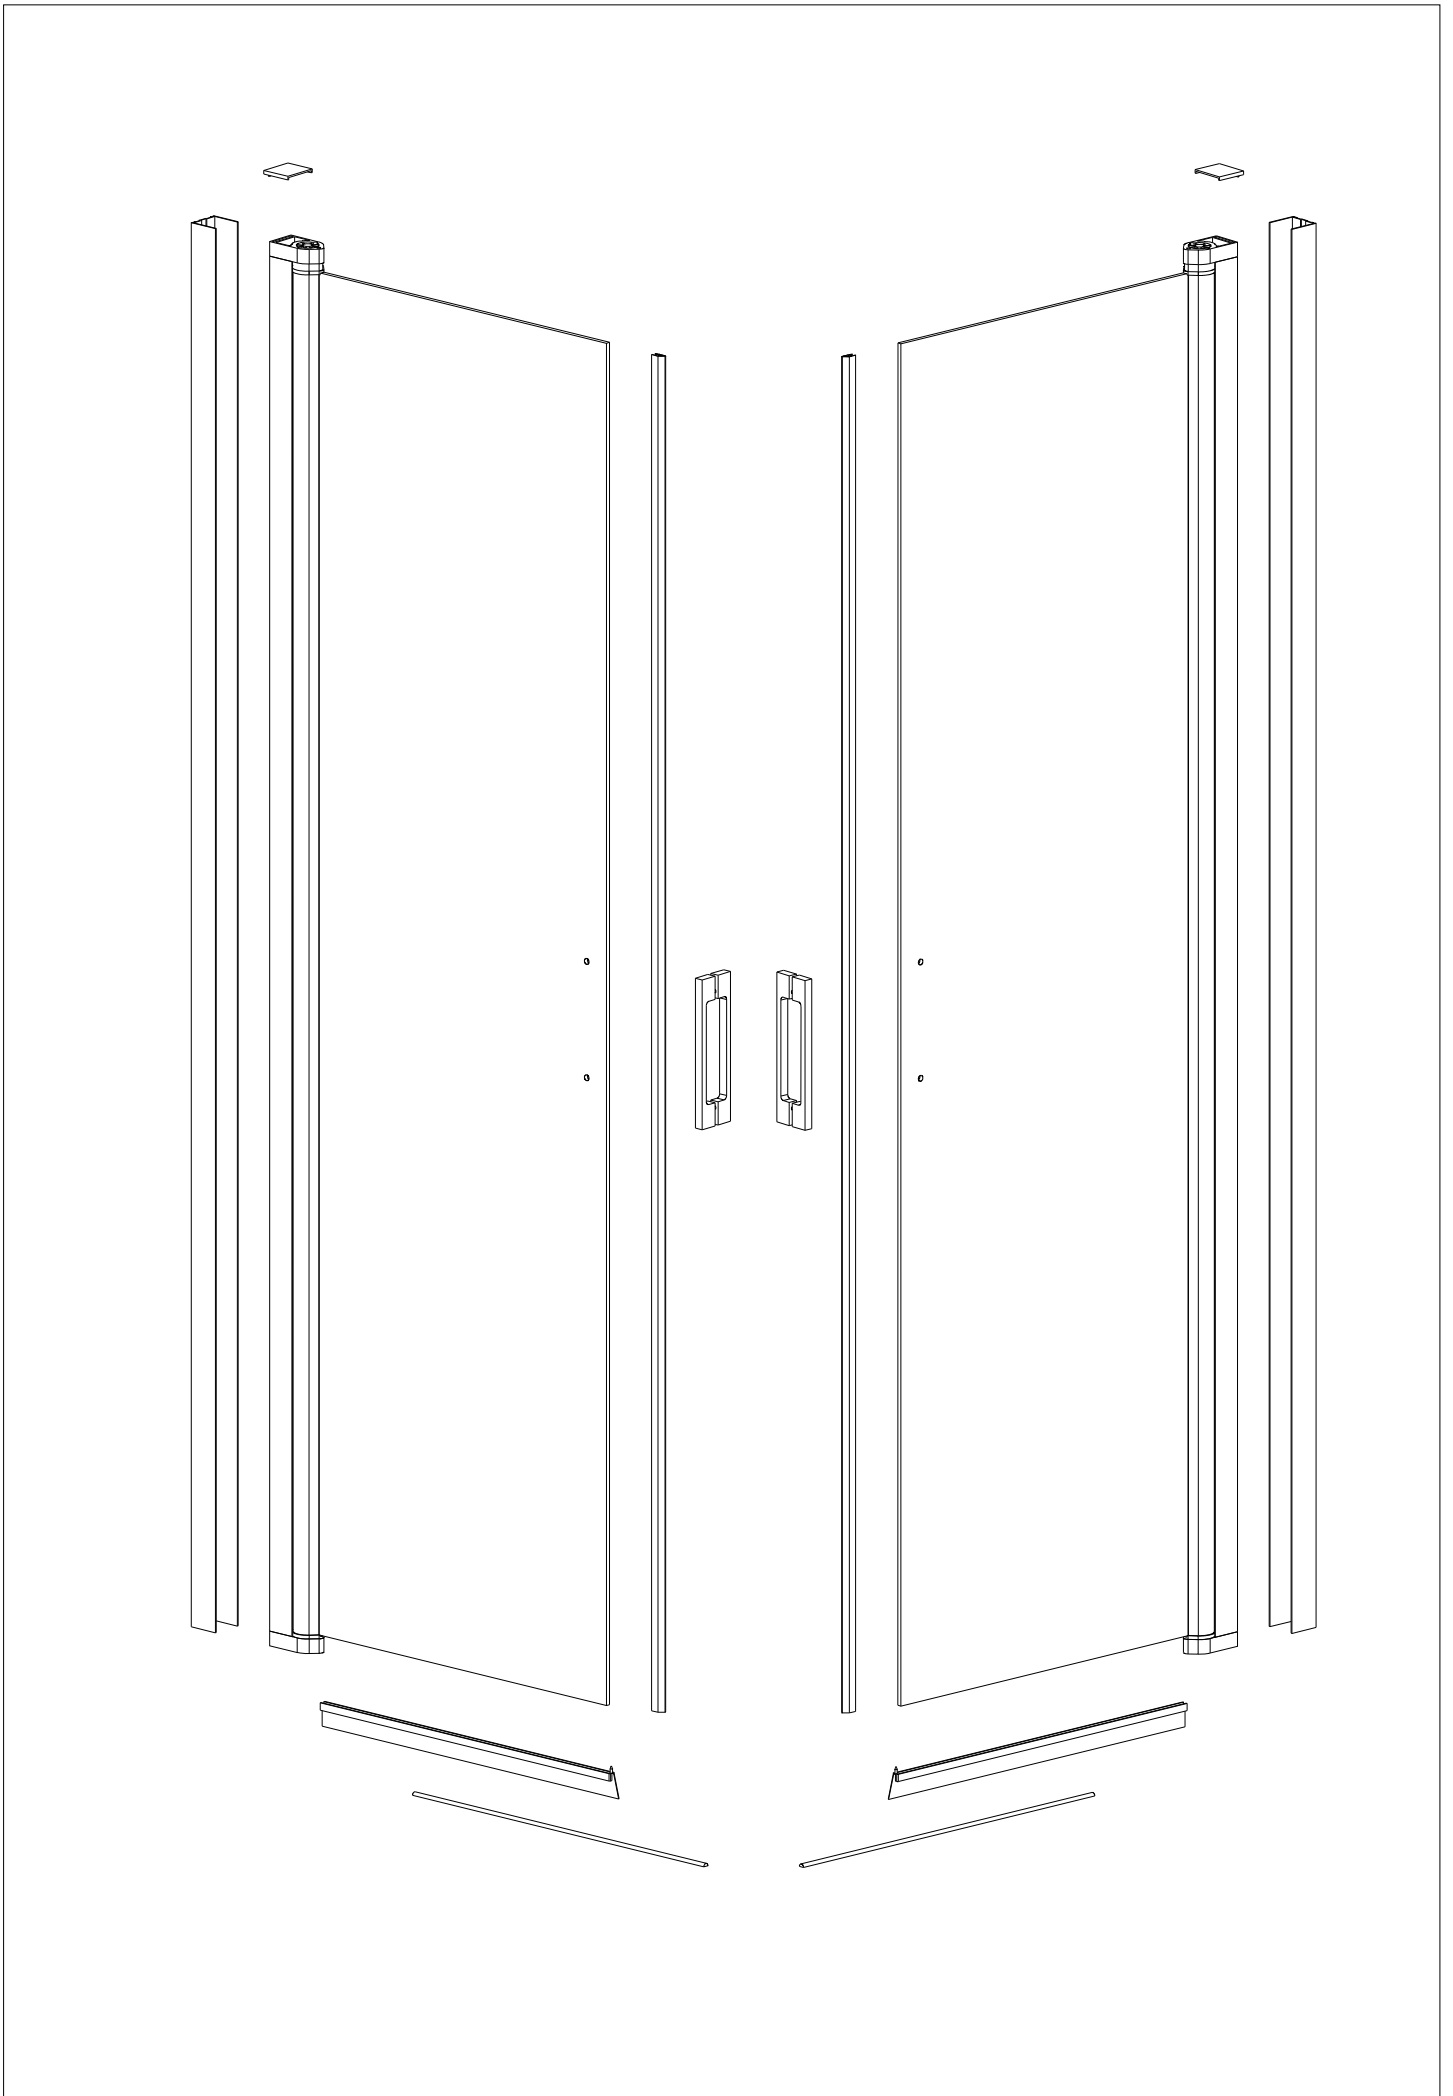



M-01  **2**


M-03  **2**


M-05  **2**


M-07  **2**


M-09  $\phi 6$ **6**

M-11  $3,5 \times 16$ **6**

M-02  **2**



M-04  **2**


M-06  **2**



M-08  **6**



M-10  **DIN 7981 4,2x32** **6**



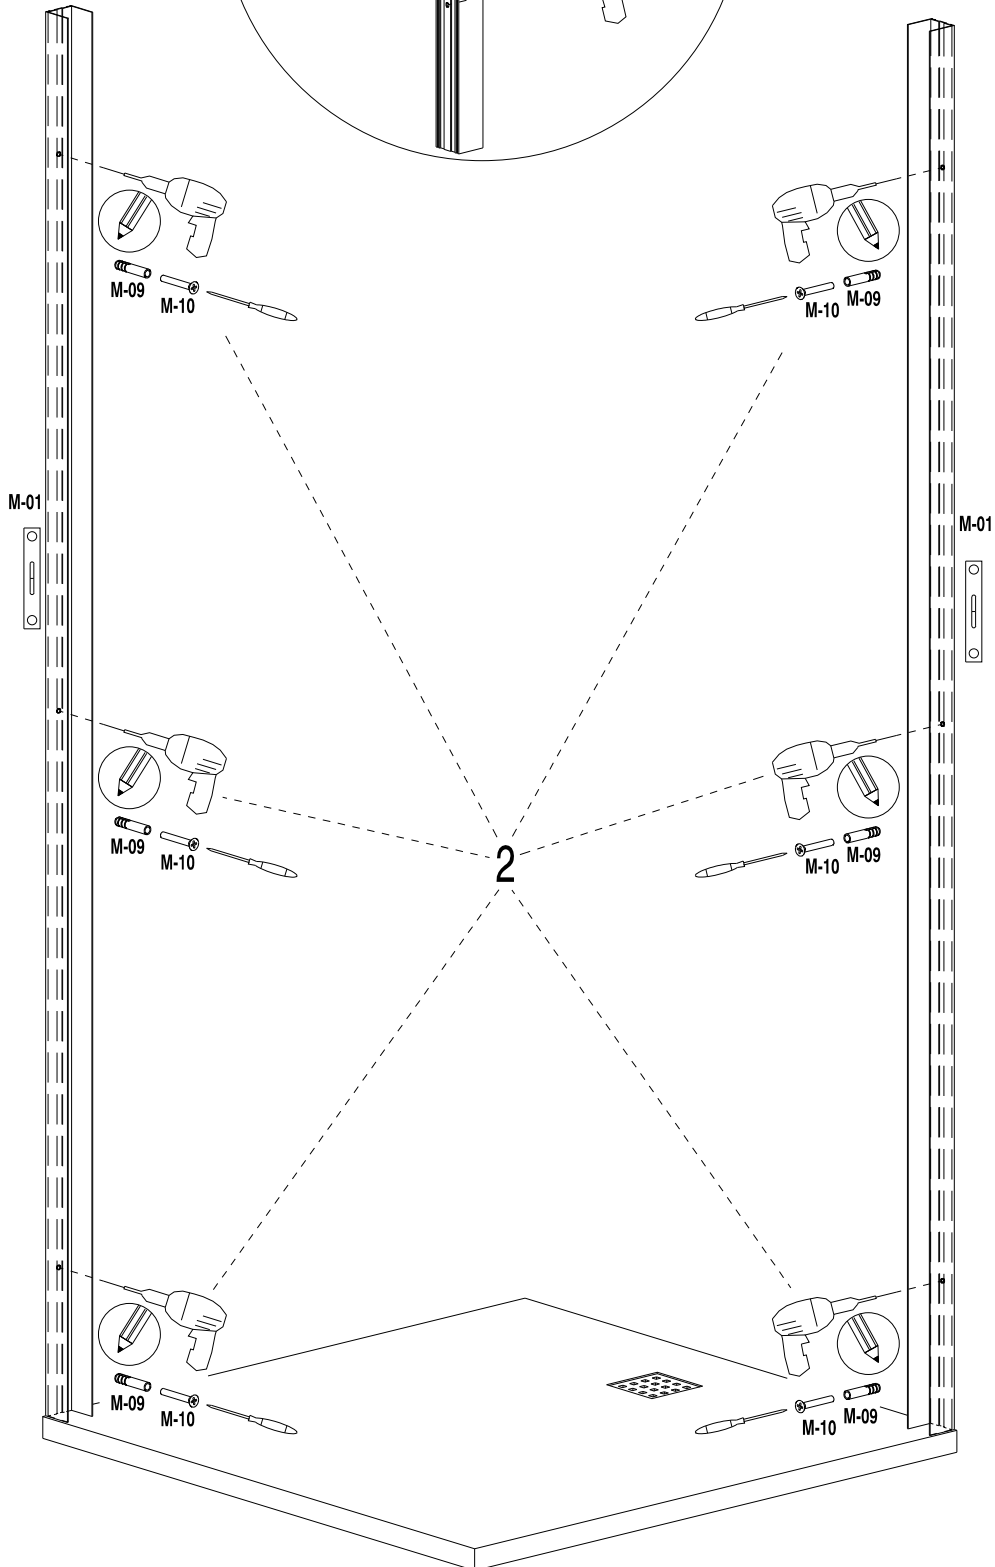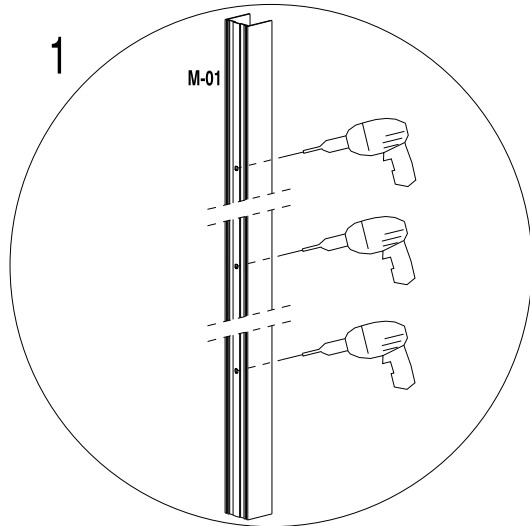


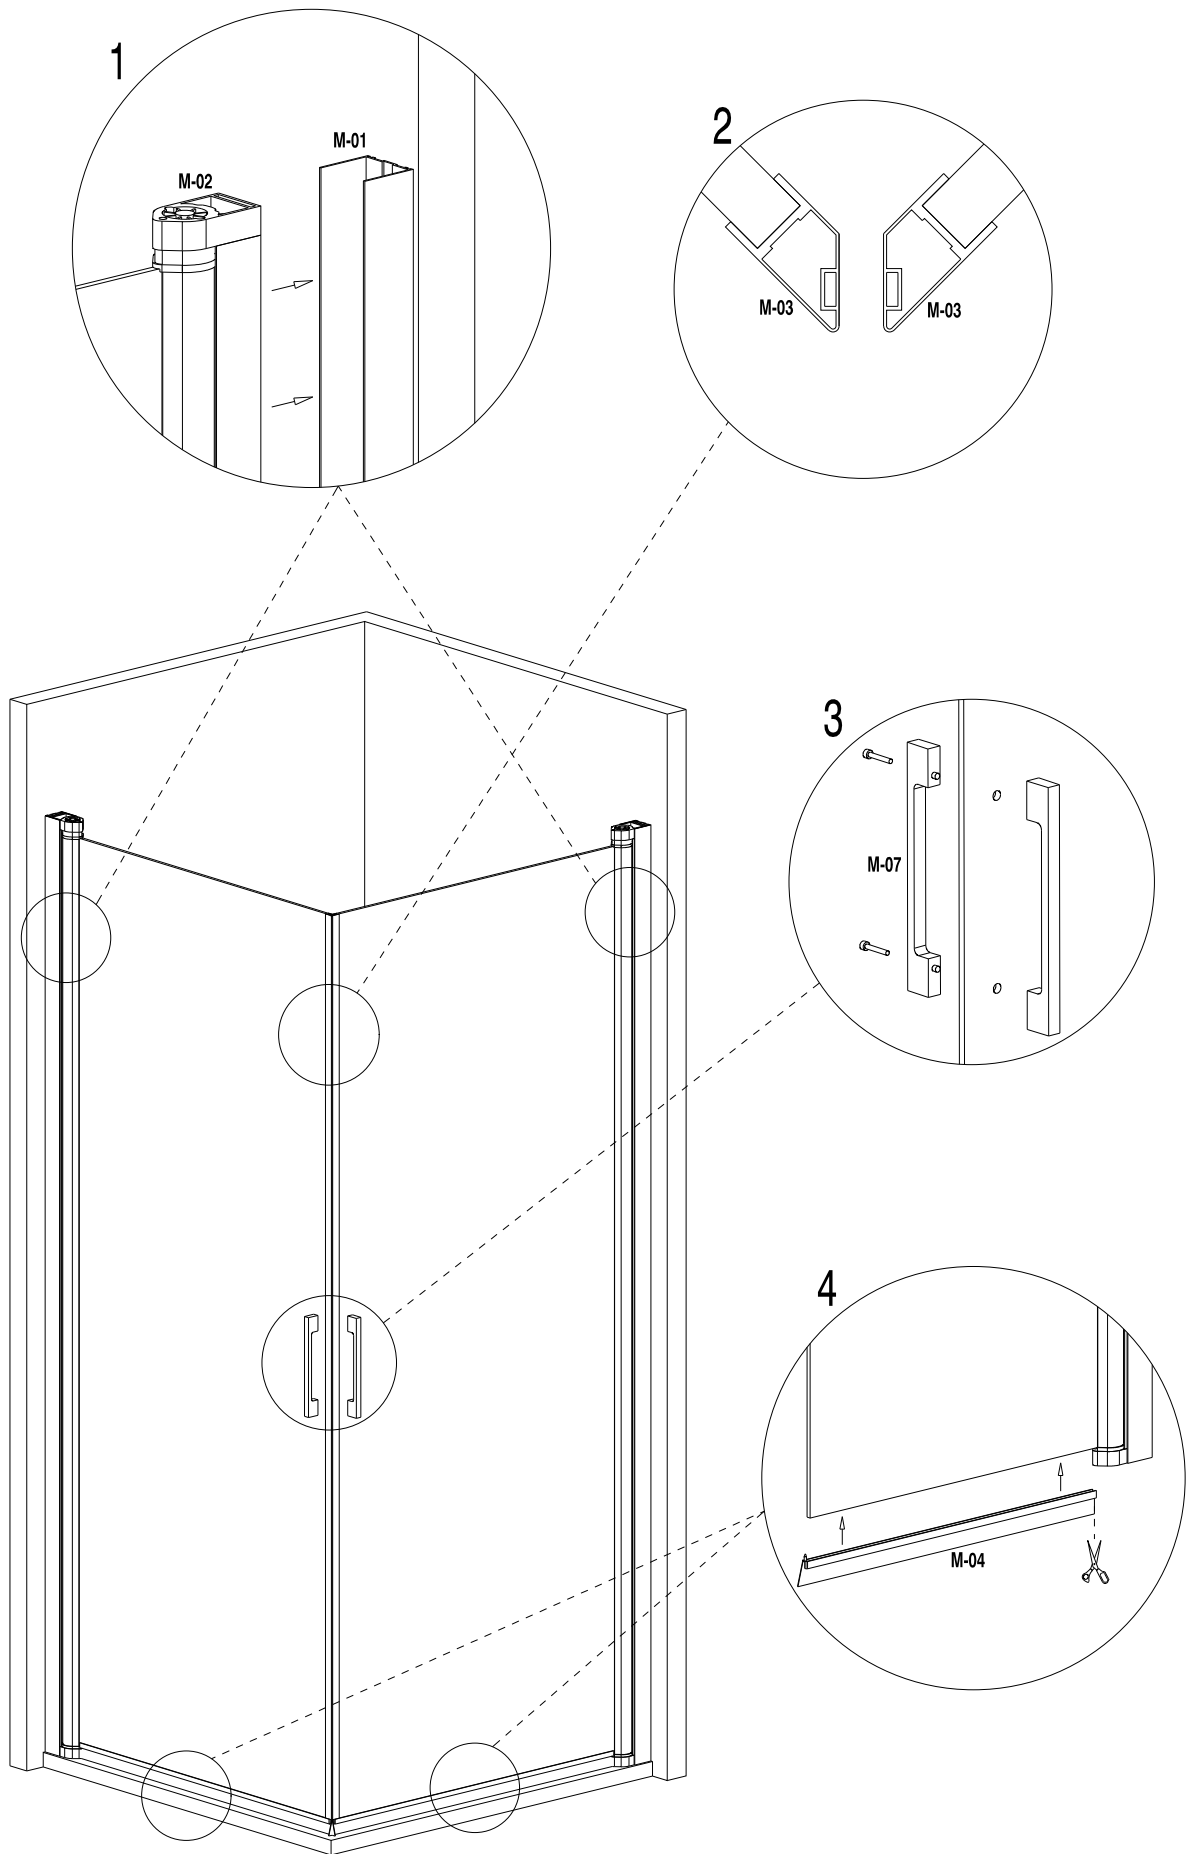

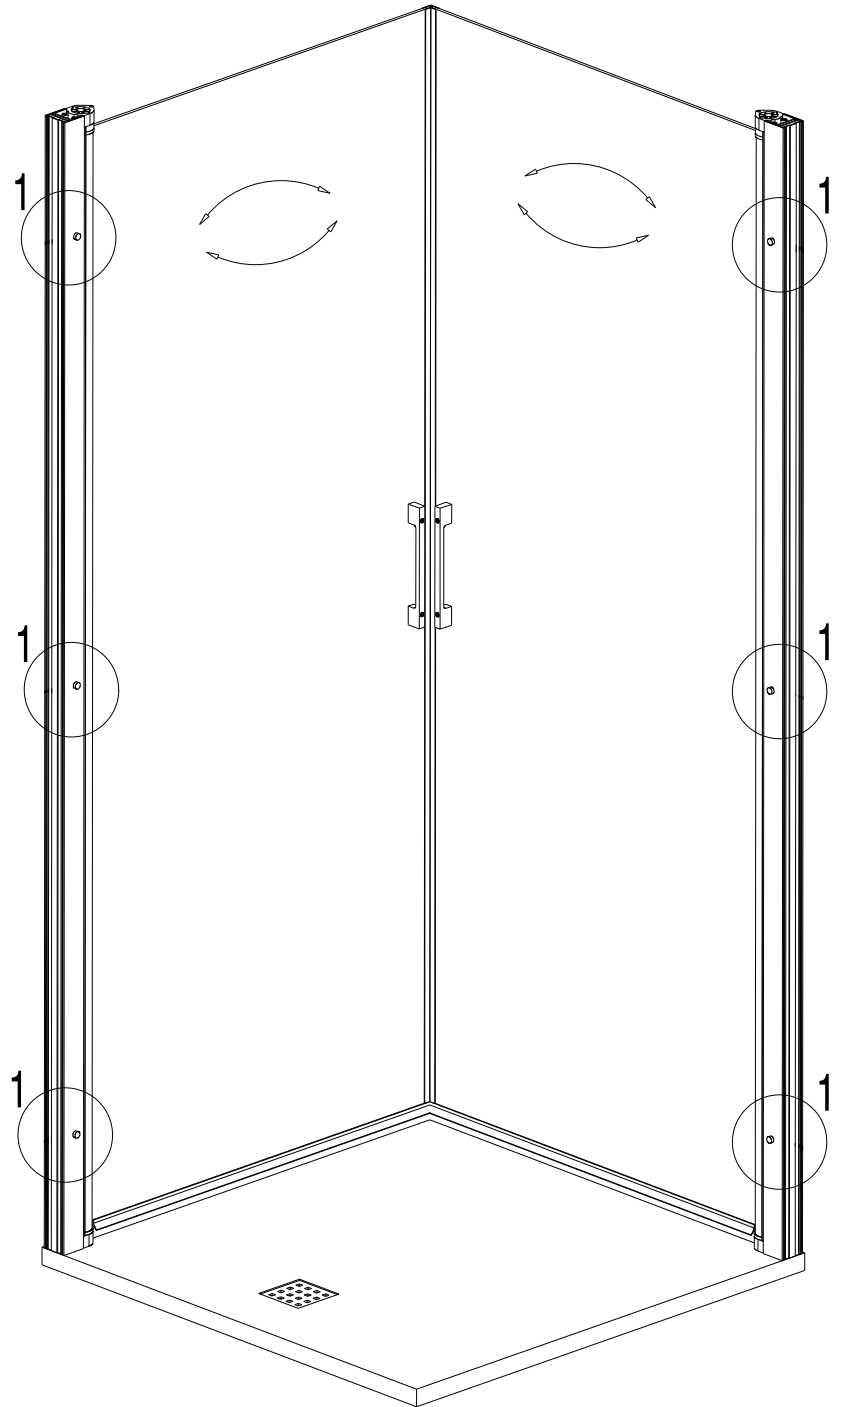
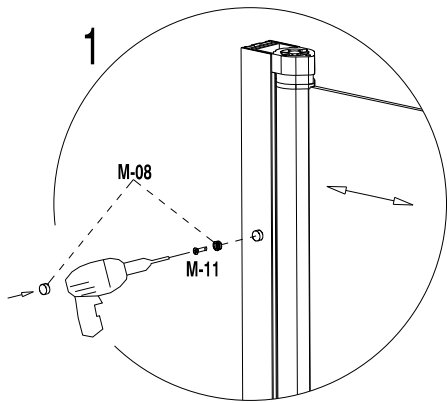


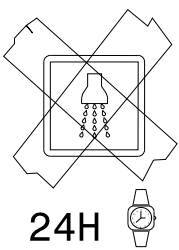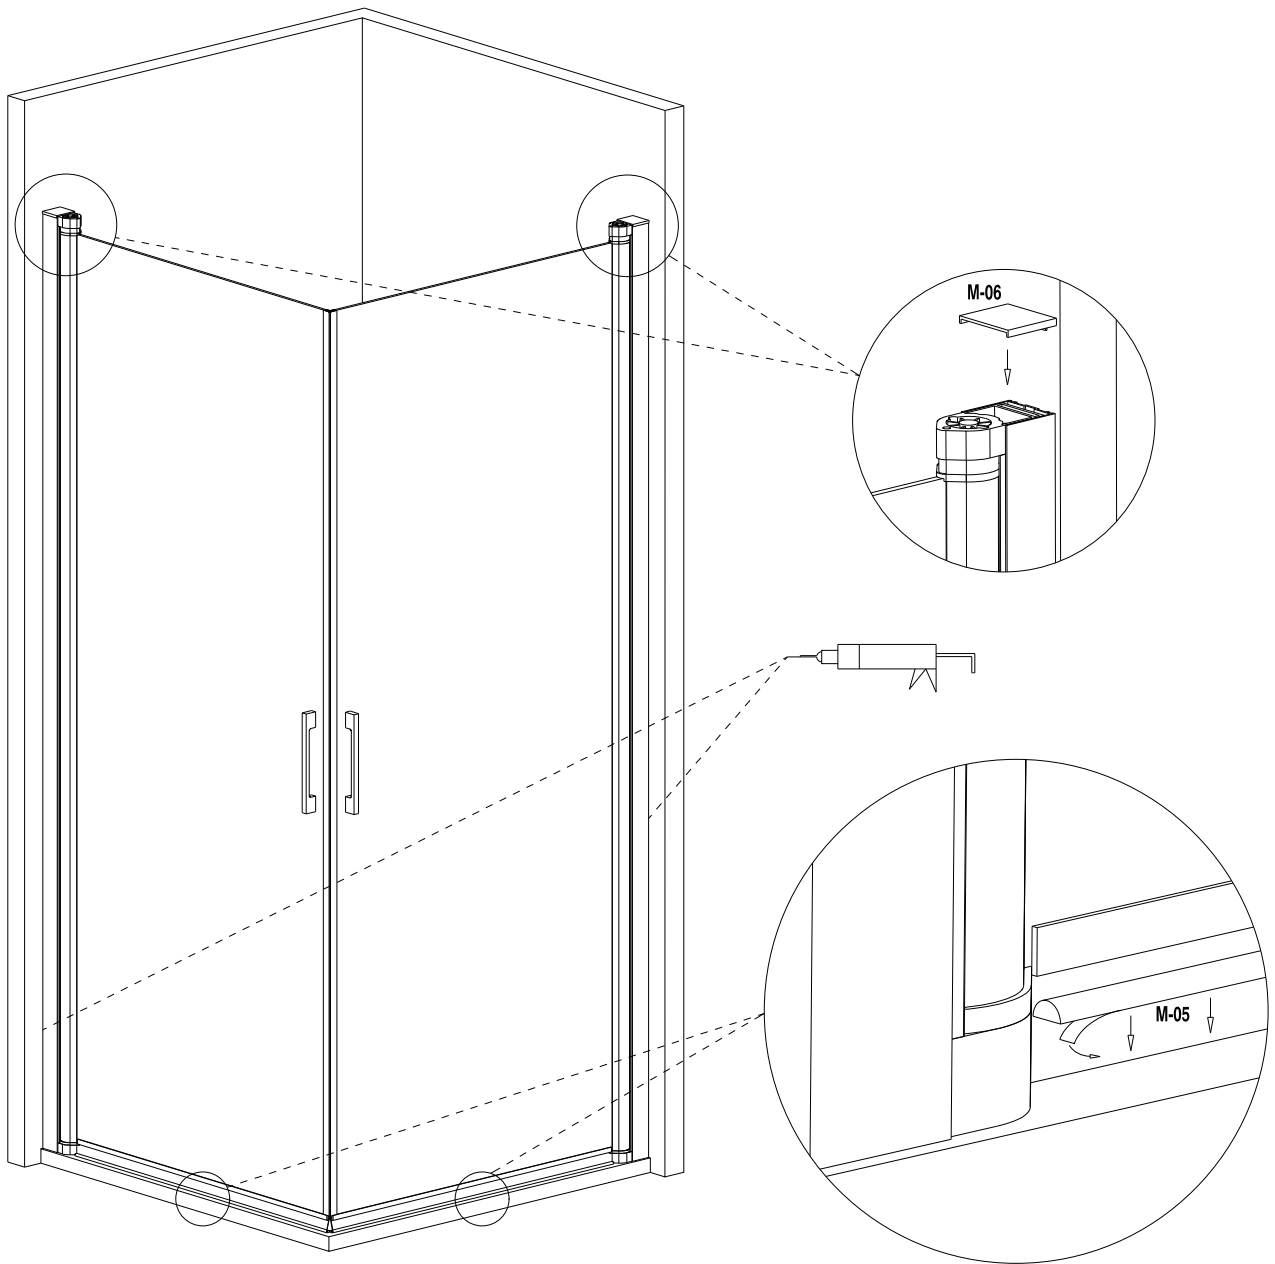


24H

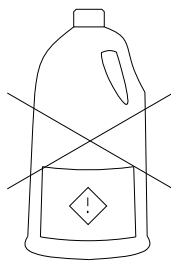

X



✓

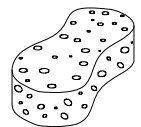



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

