



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //

FURO P10 - Option A


FURO P19 - Option B

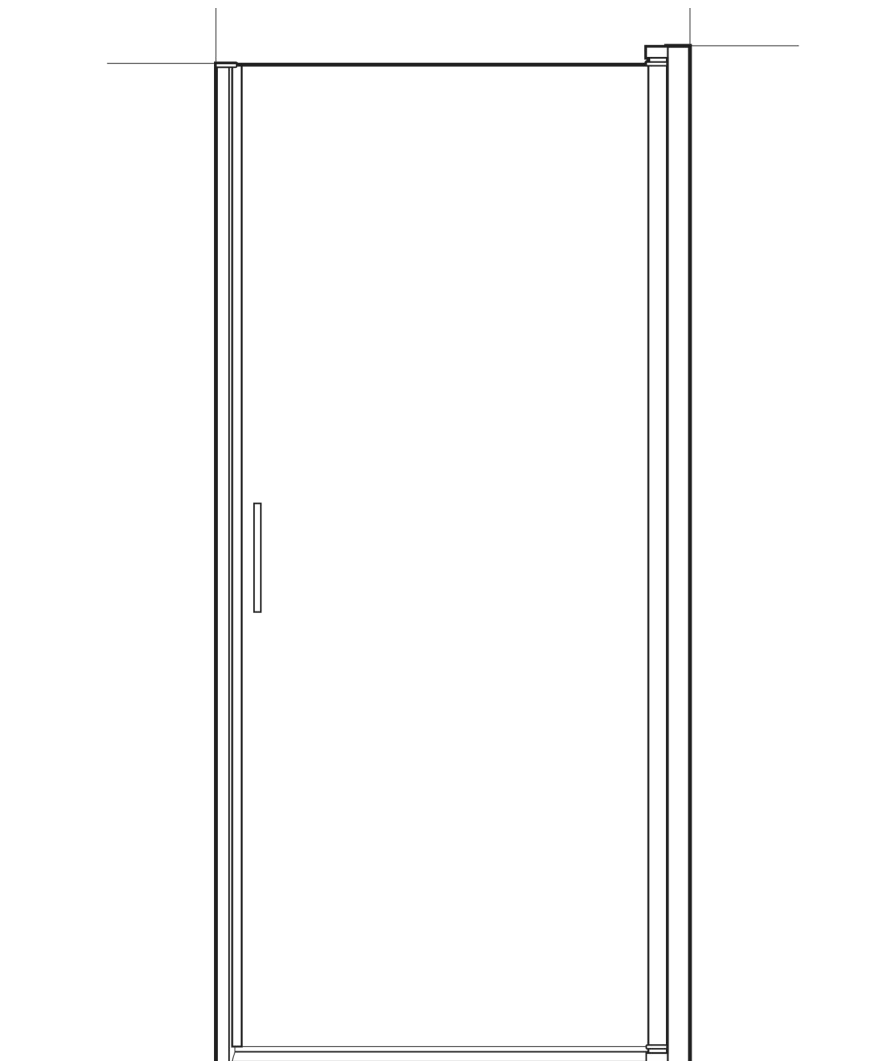

A

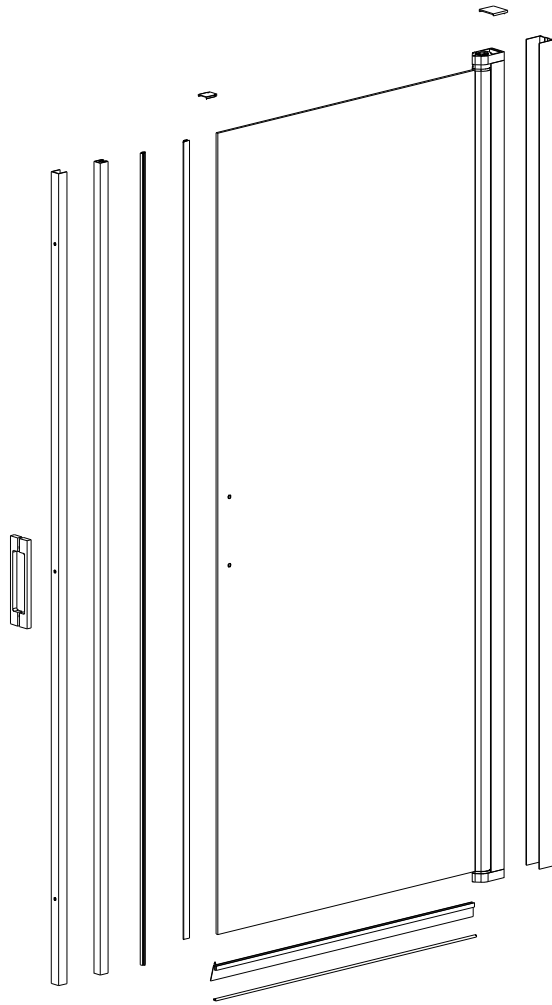





B


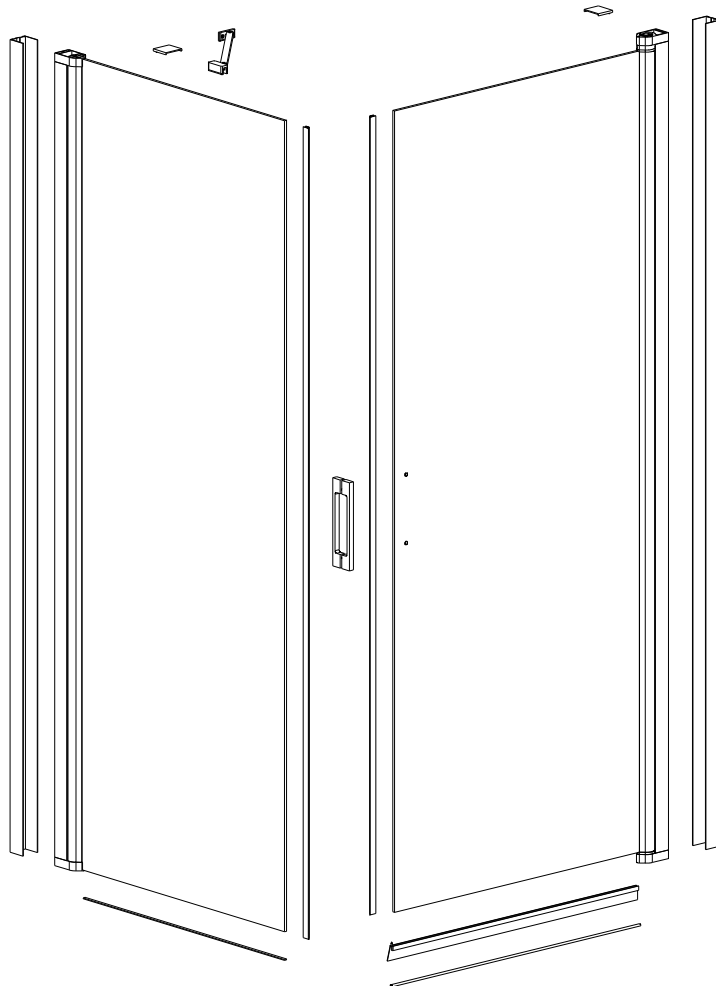


A					
M-01		1	M-02		1
M-03		1	M-04		1
M-05		1	M-06		1
M-07		1	M-08	 DIN 7981 4,2x32	6
M-09	 Ø 6	6	M-10		6
M-11	 3,5x16	6	M-12		1
M-13		1	M-14		1
M-15		1			




B					
M-01		2	M-02		1
M-03		2	M-04		2
M-05		1	M-06		1
M-07		1	M-08	 DIN 7981 4,2x32	6
M-09	 Ø 6	8	M-10		6
M-11	 3,5x16	6	M-16	 DIN 7982 4,2x32	2
M-17		1			
M-19		1			

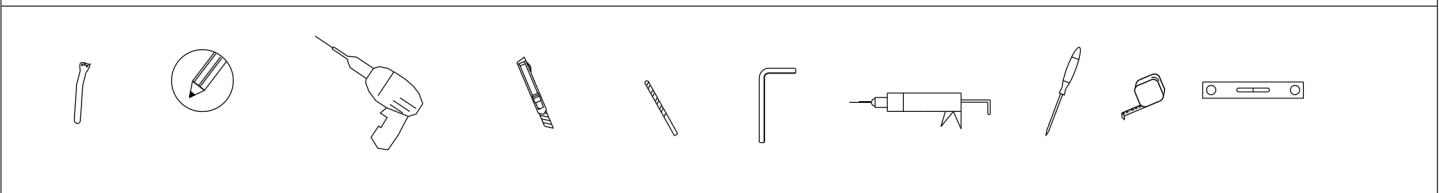





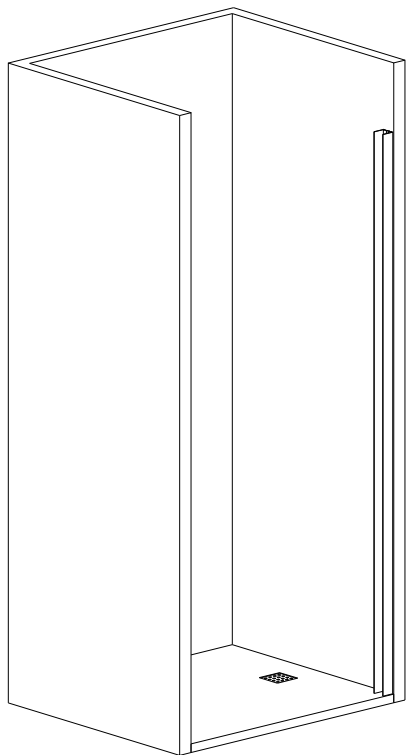
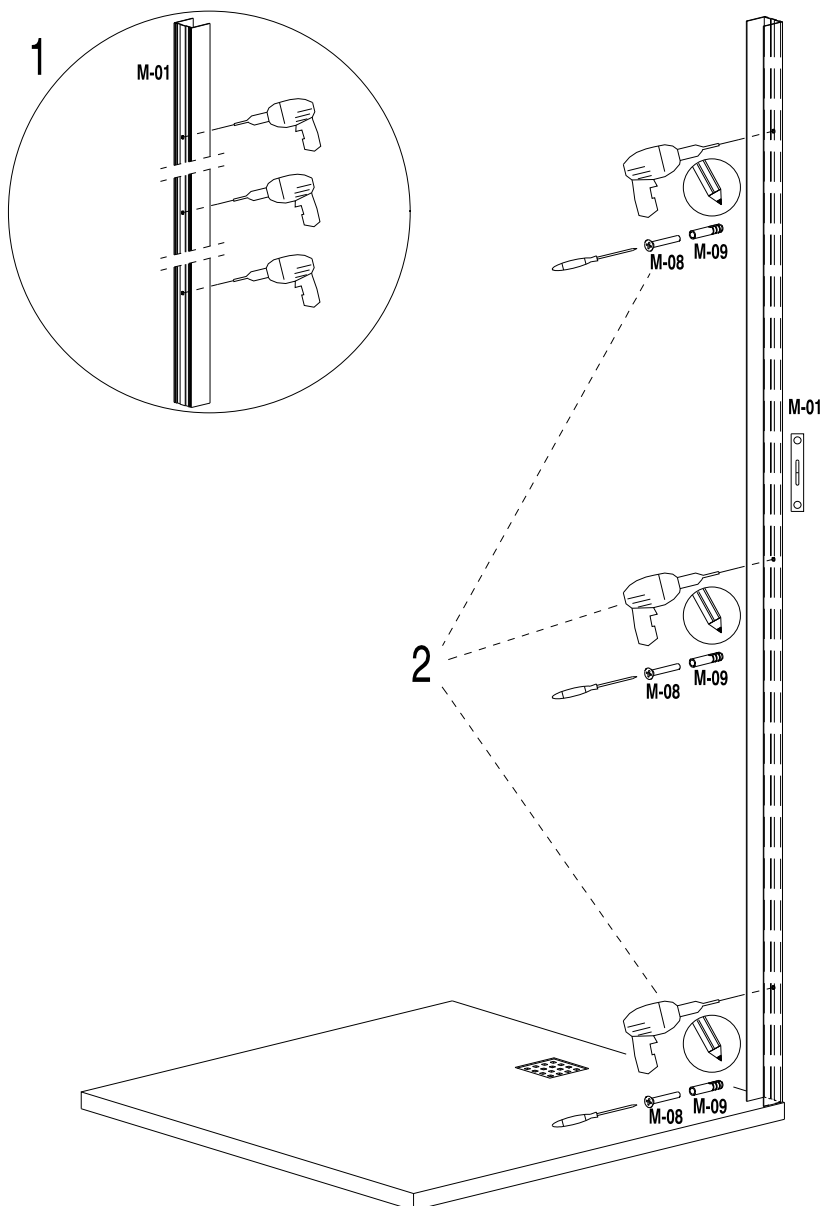
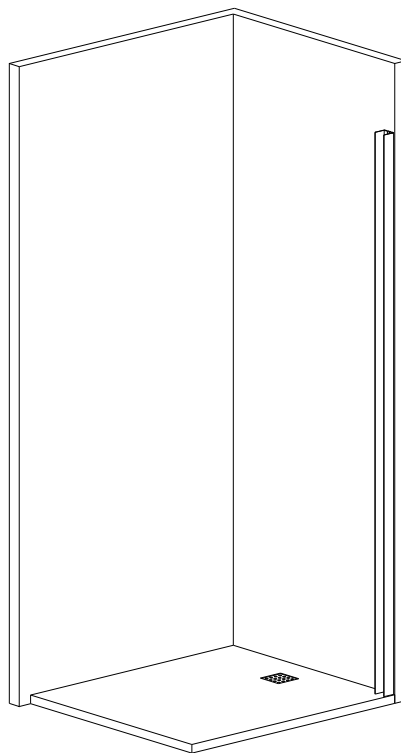
A**B**

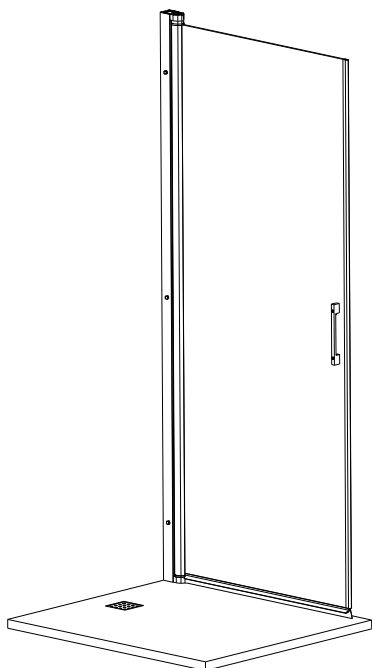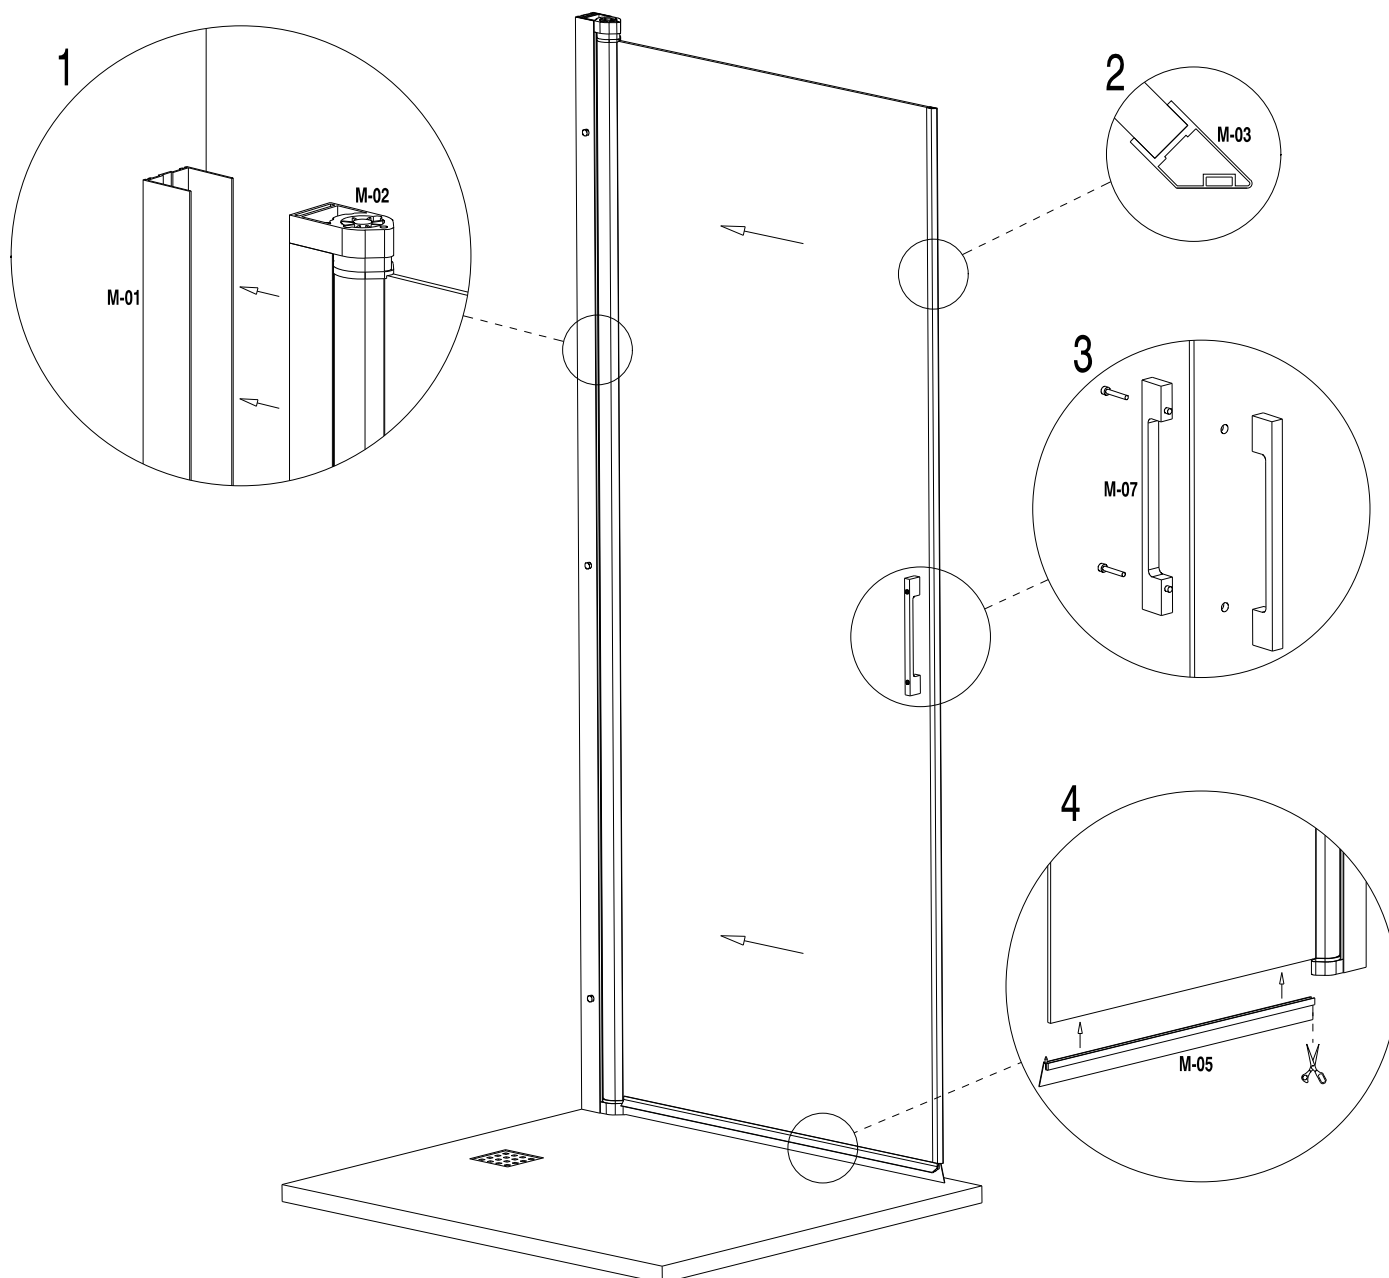A**B**




A

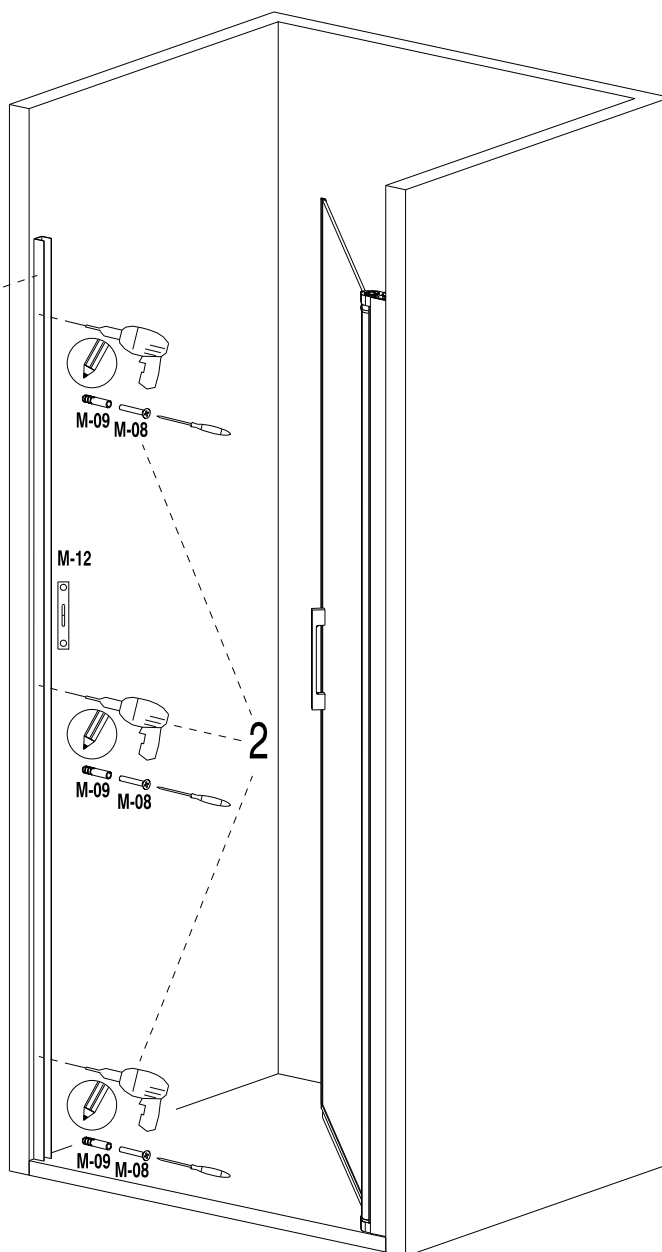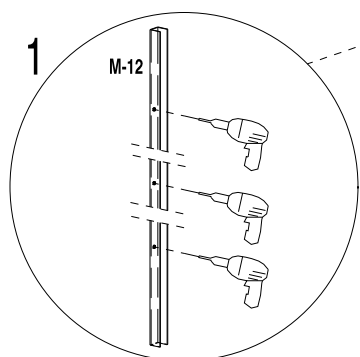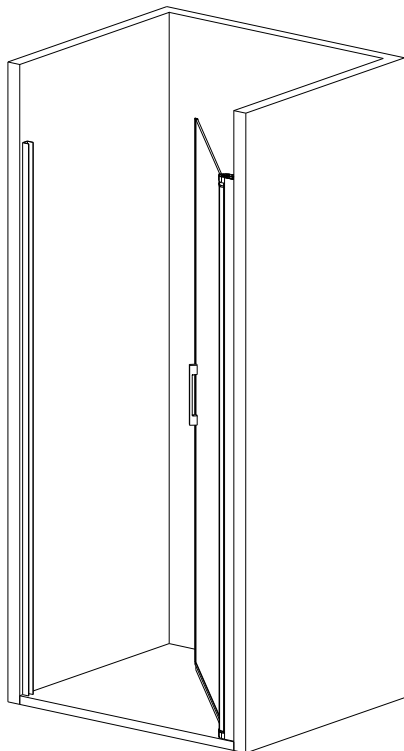



A

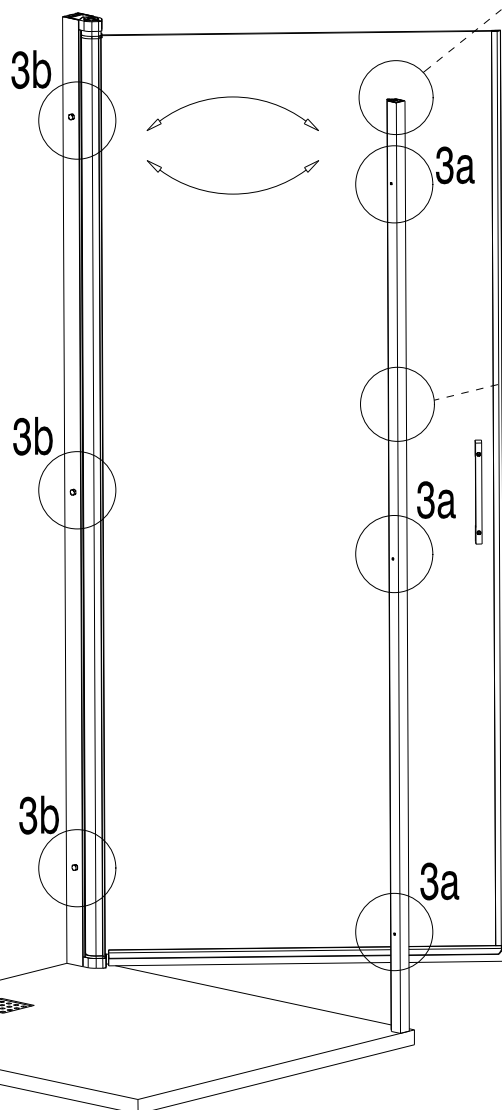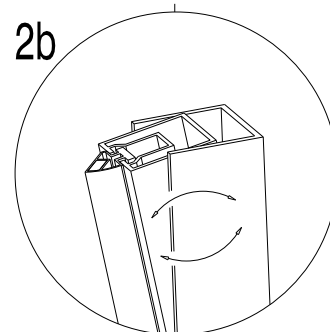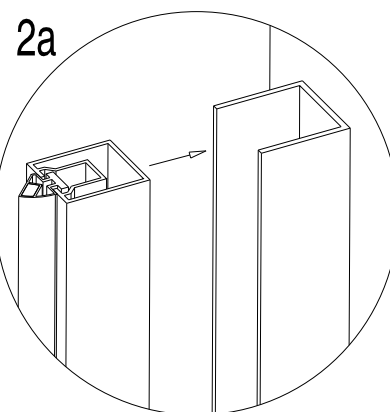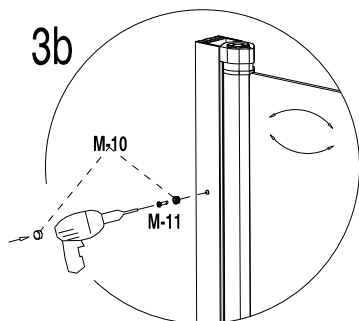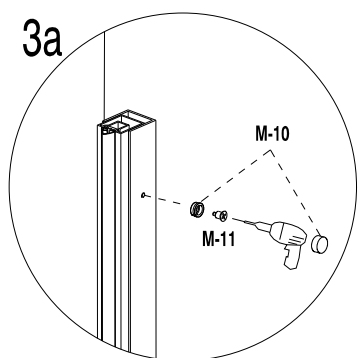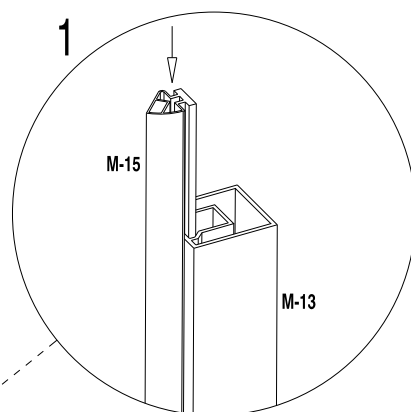
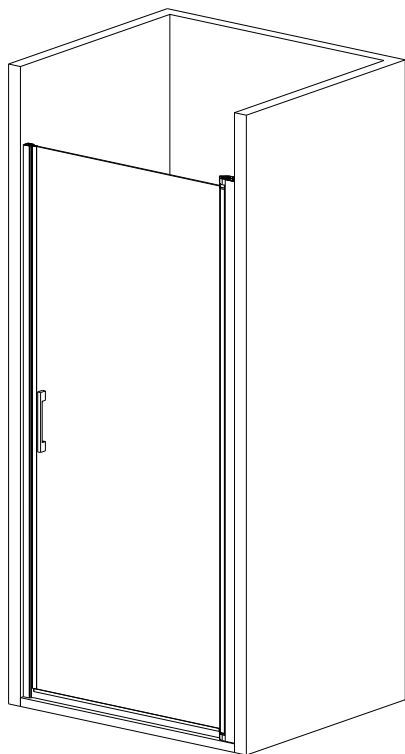


B

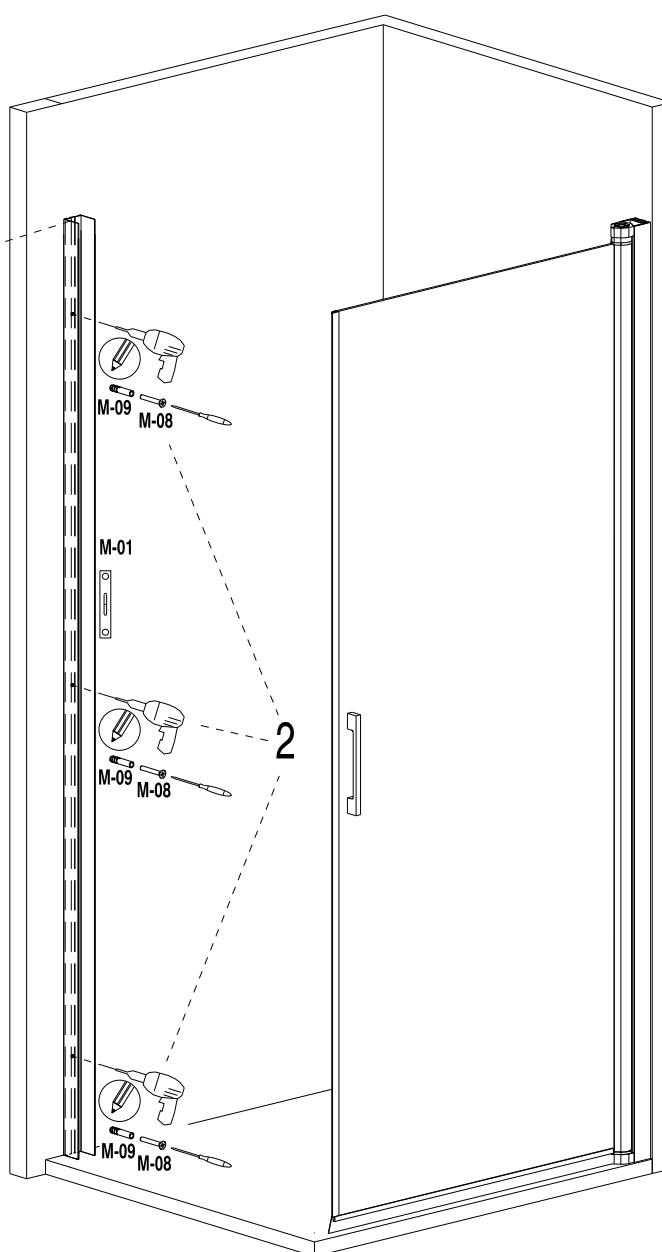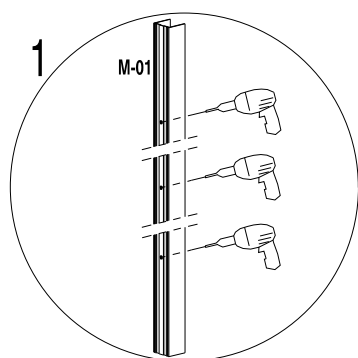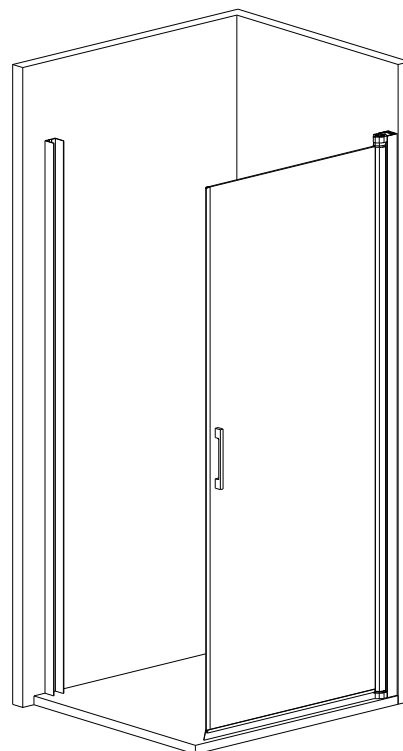


B



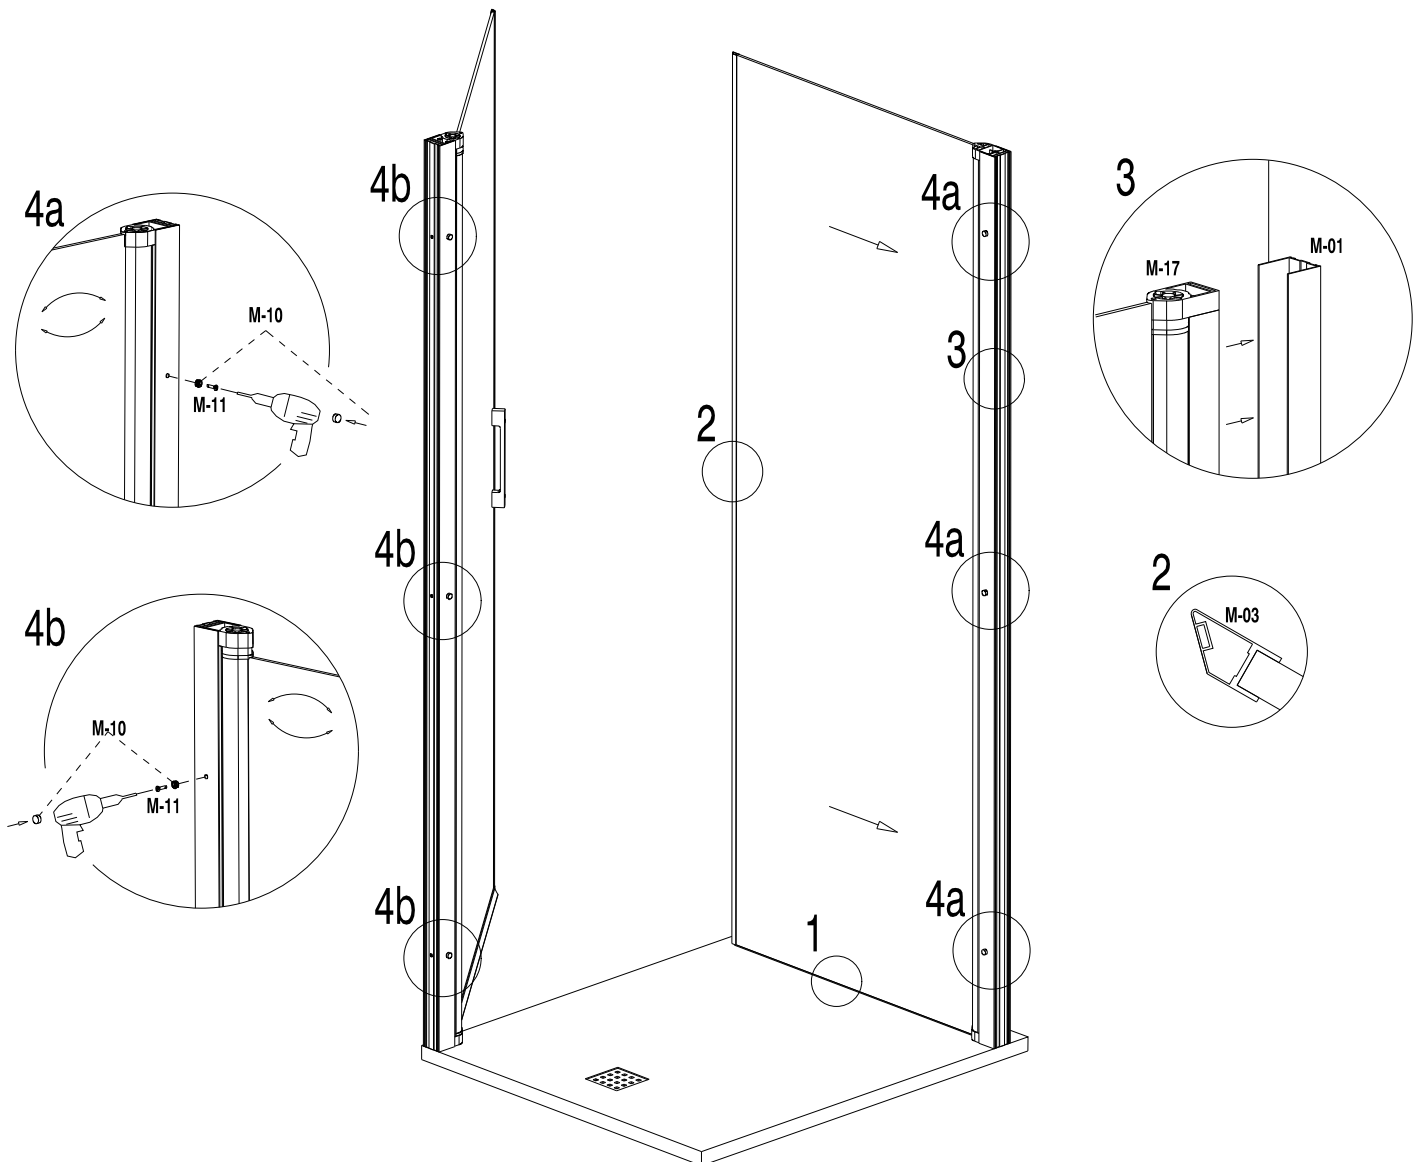
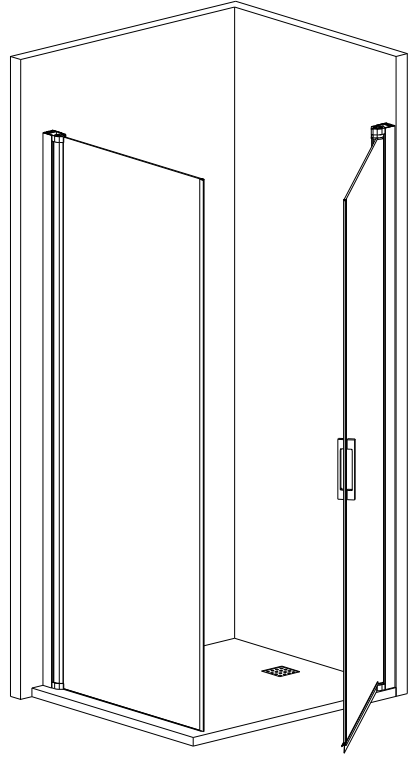


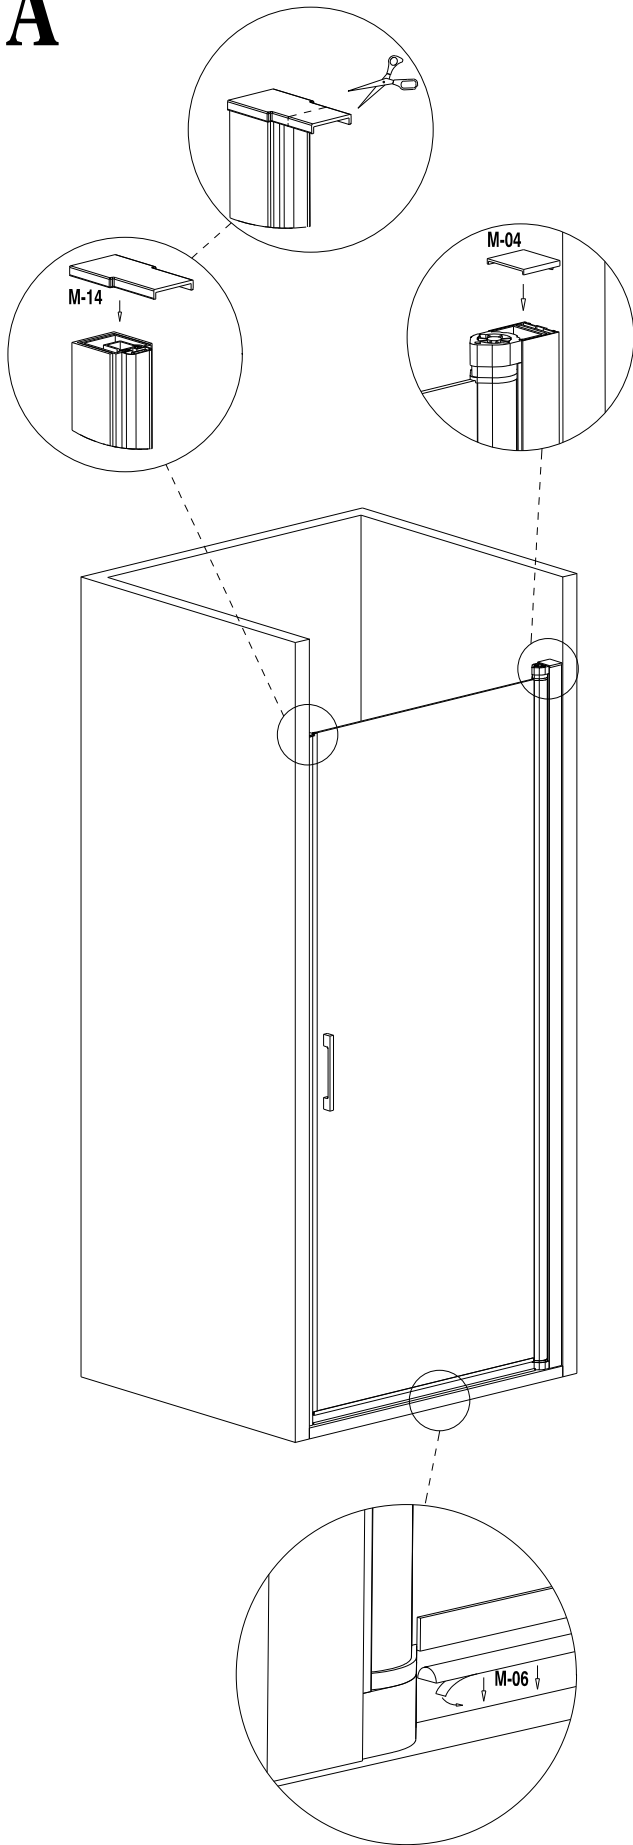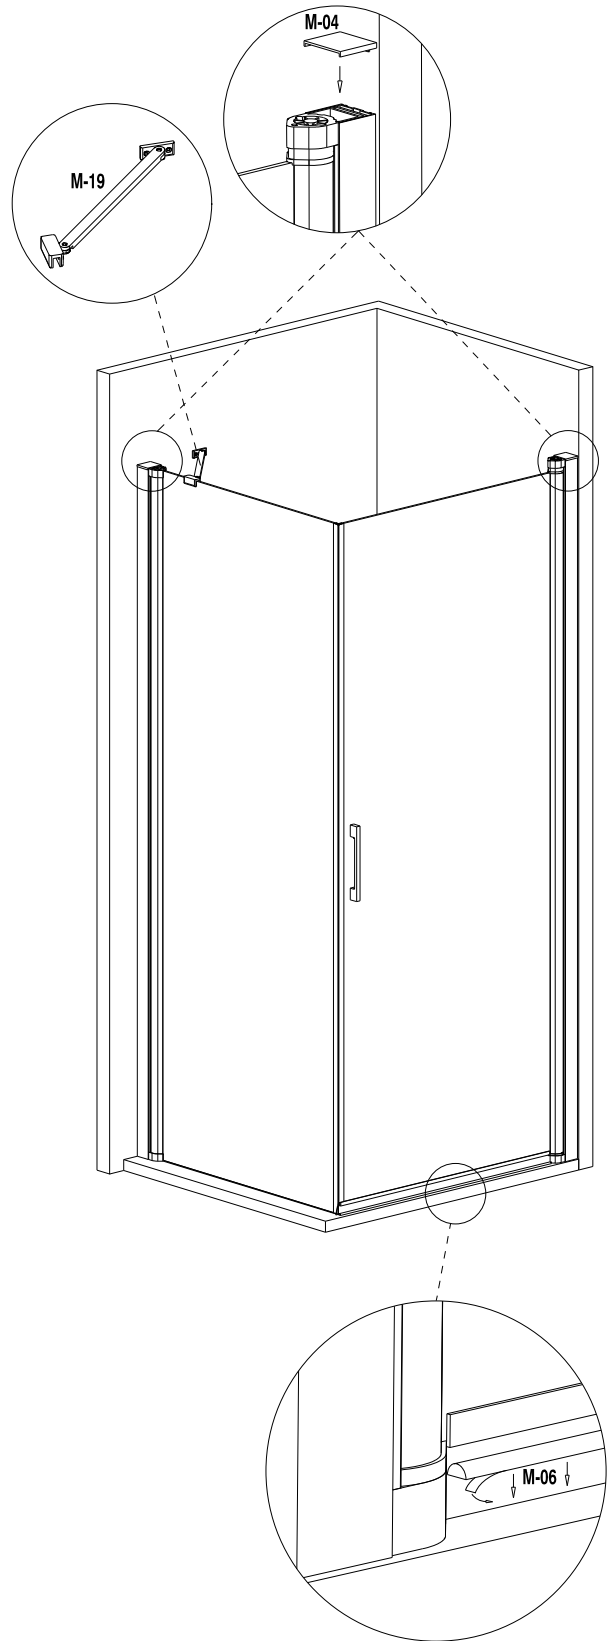A**B**

A

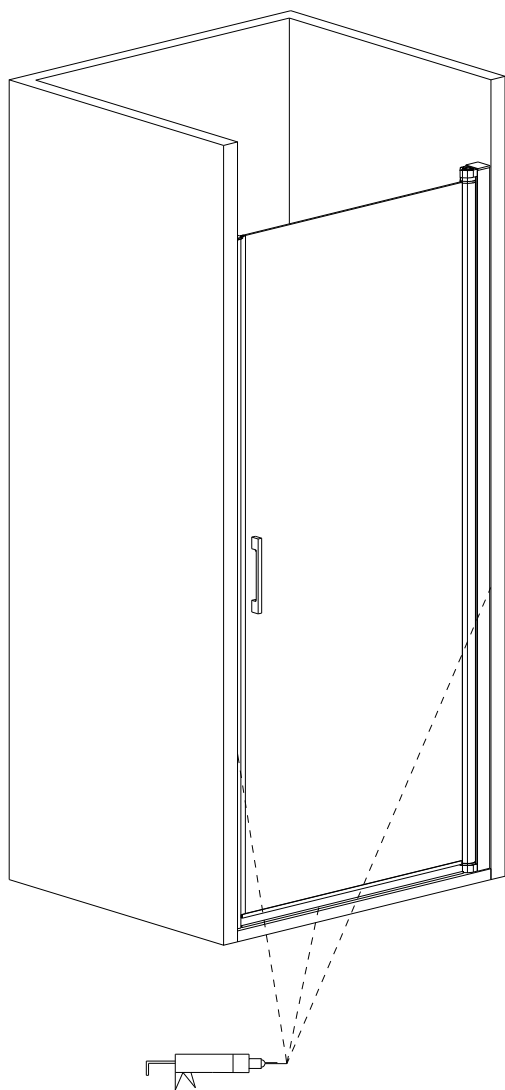

B

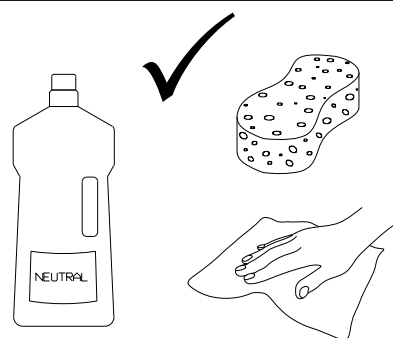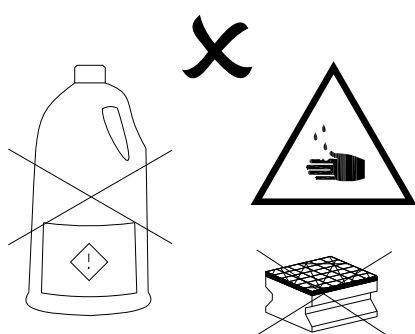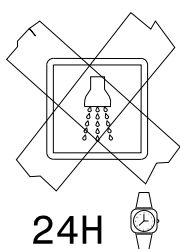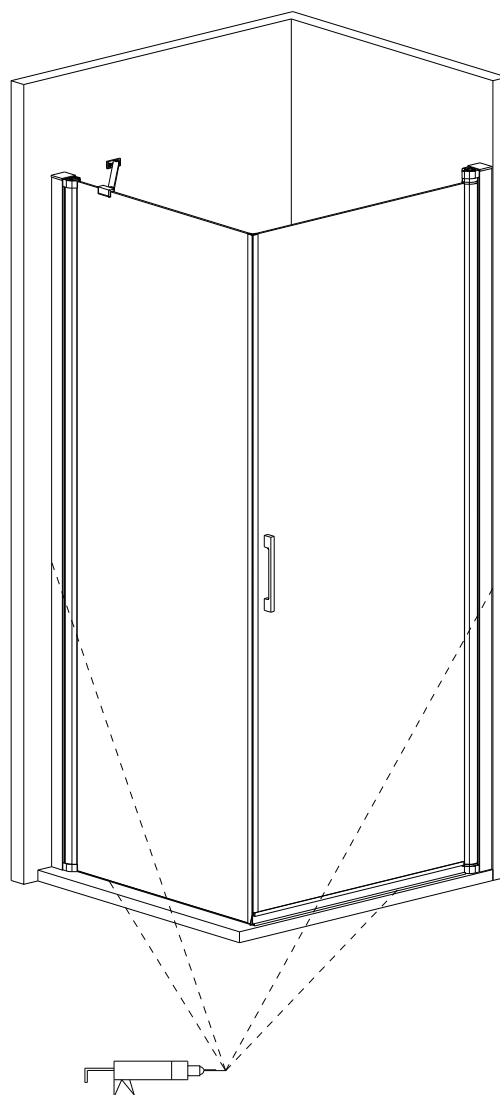



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

