

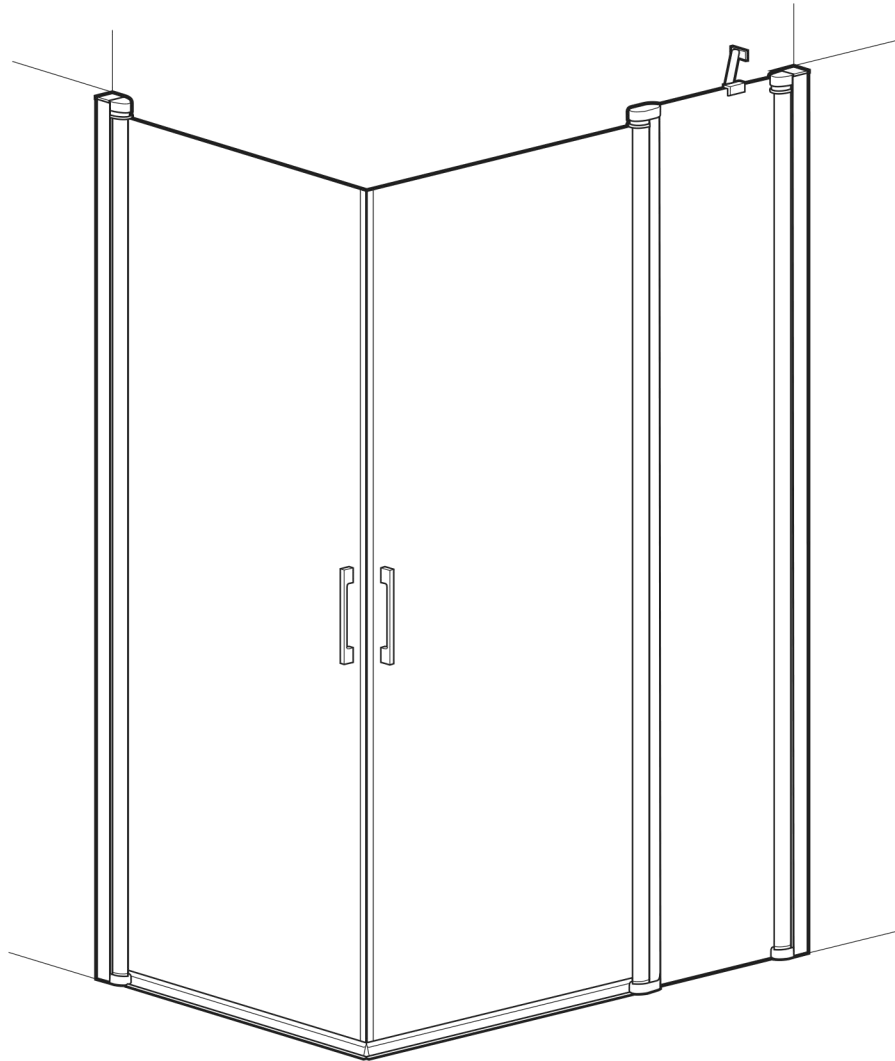



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //  
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


## FURO P21

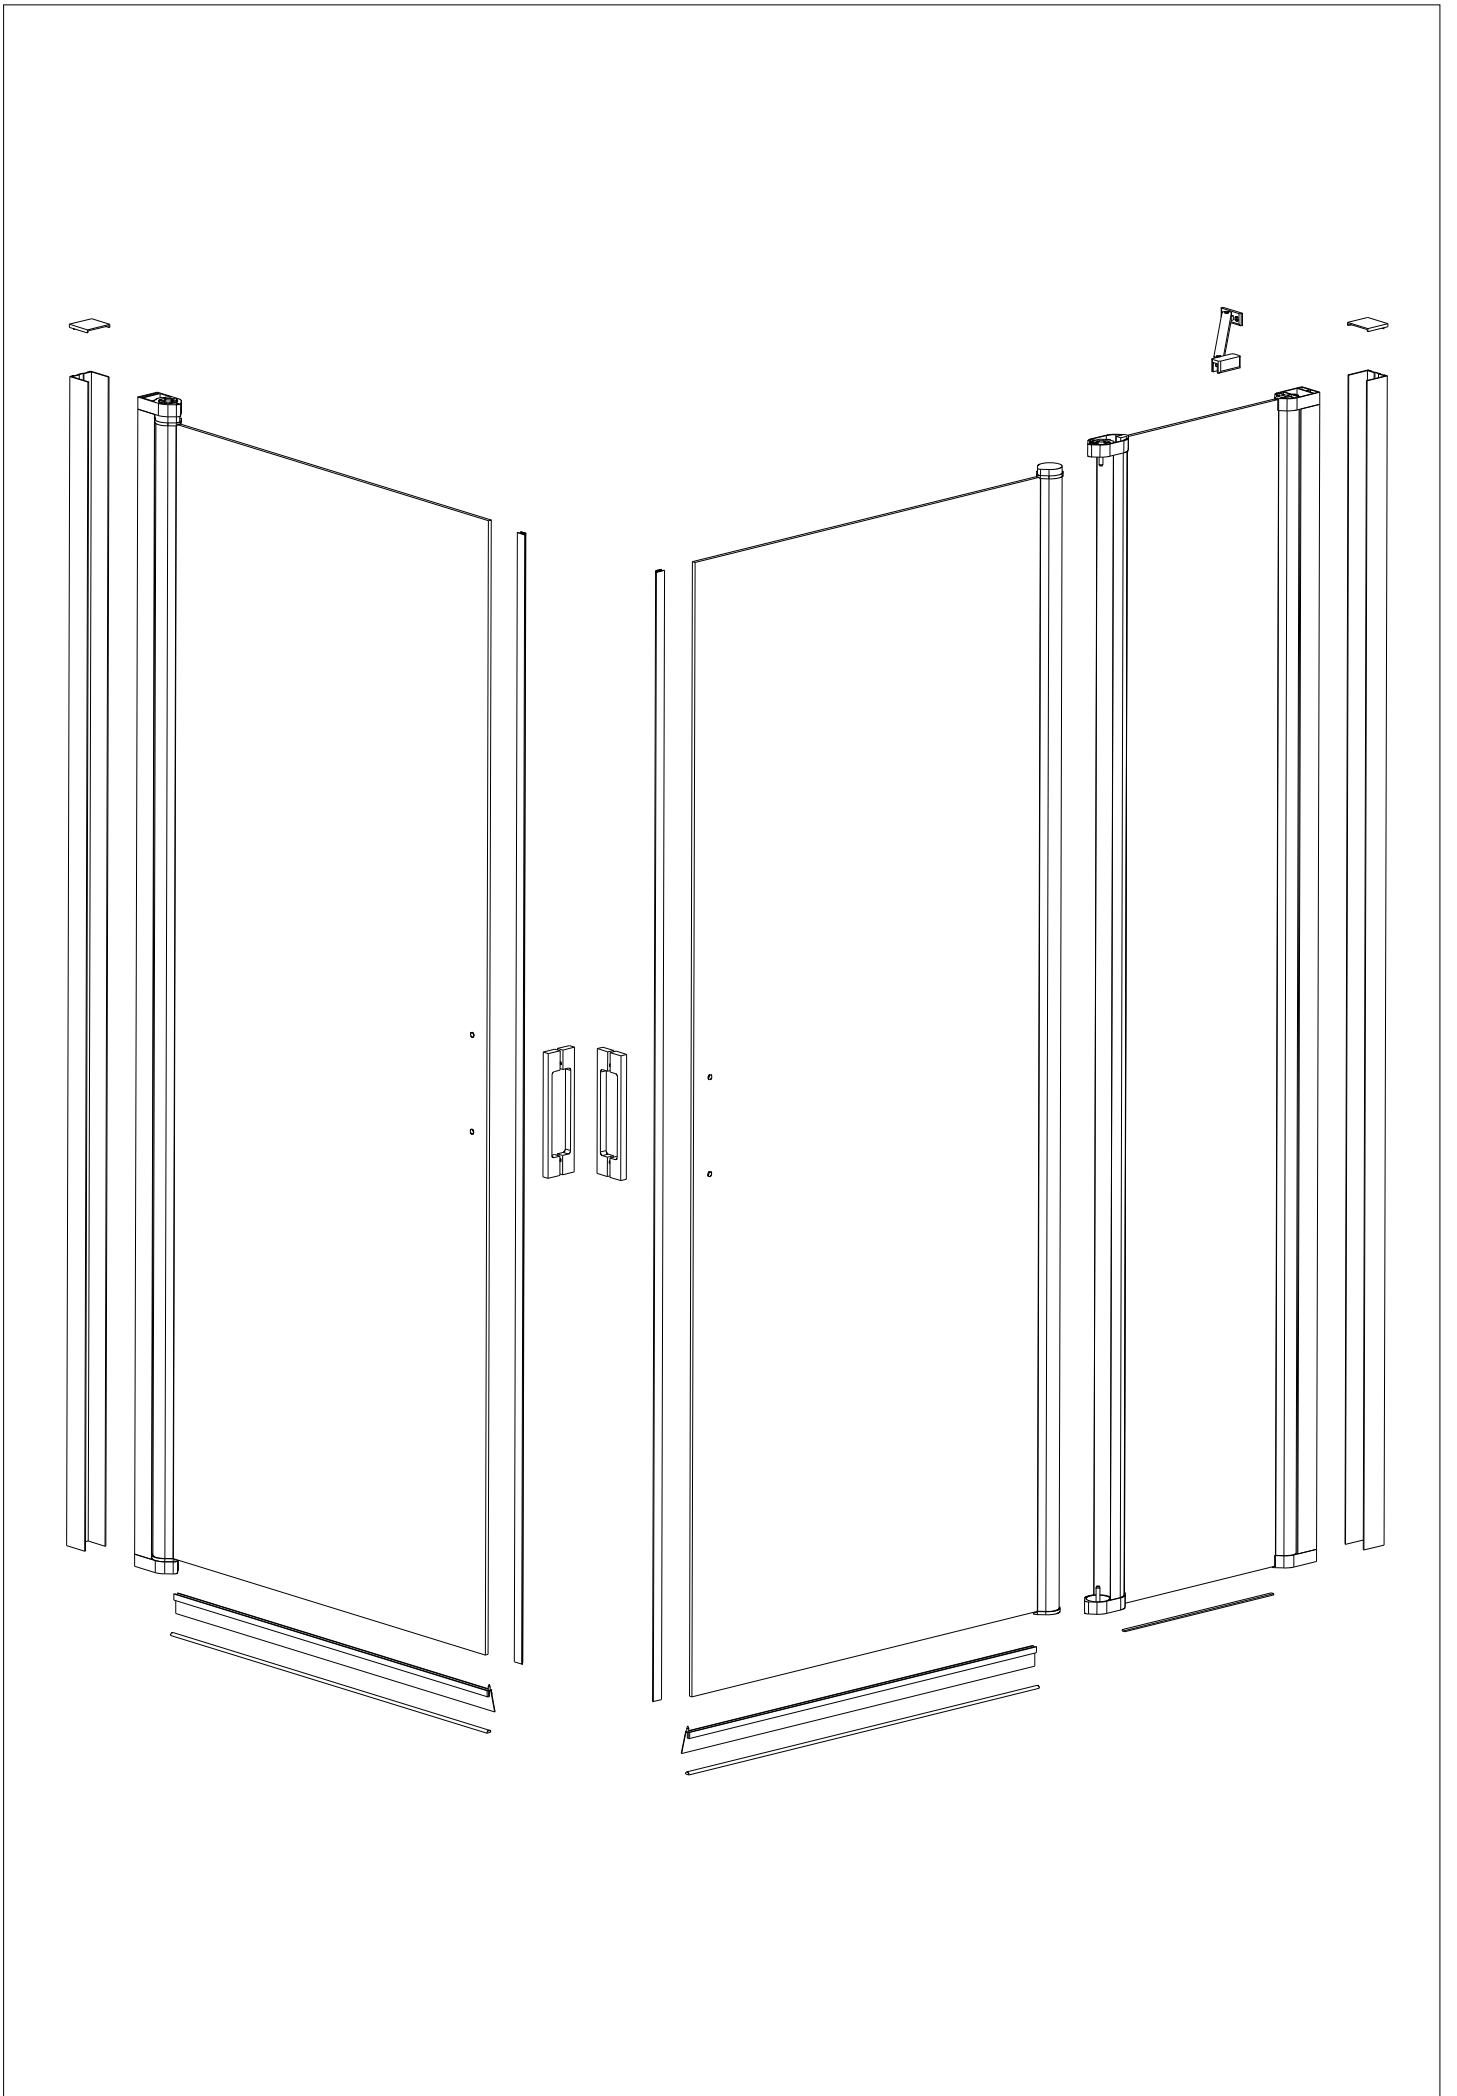


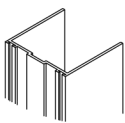



M-01  2

M-03  1

M-05  2


M-07  2


M-09  2


M-11  1

M-13   $\varnothing 6$  8

M-15  3,5x16 6

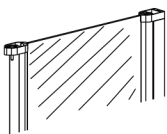M-02  1


M-04  1


M-06  2



M-10  2


M-12  DIN 7981 4,2x32 6





M-14  DIN 7982 4,2x32 2

M-16  6







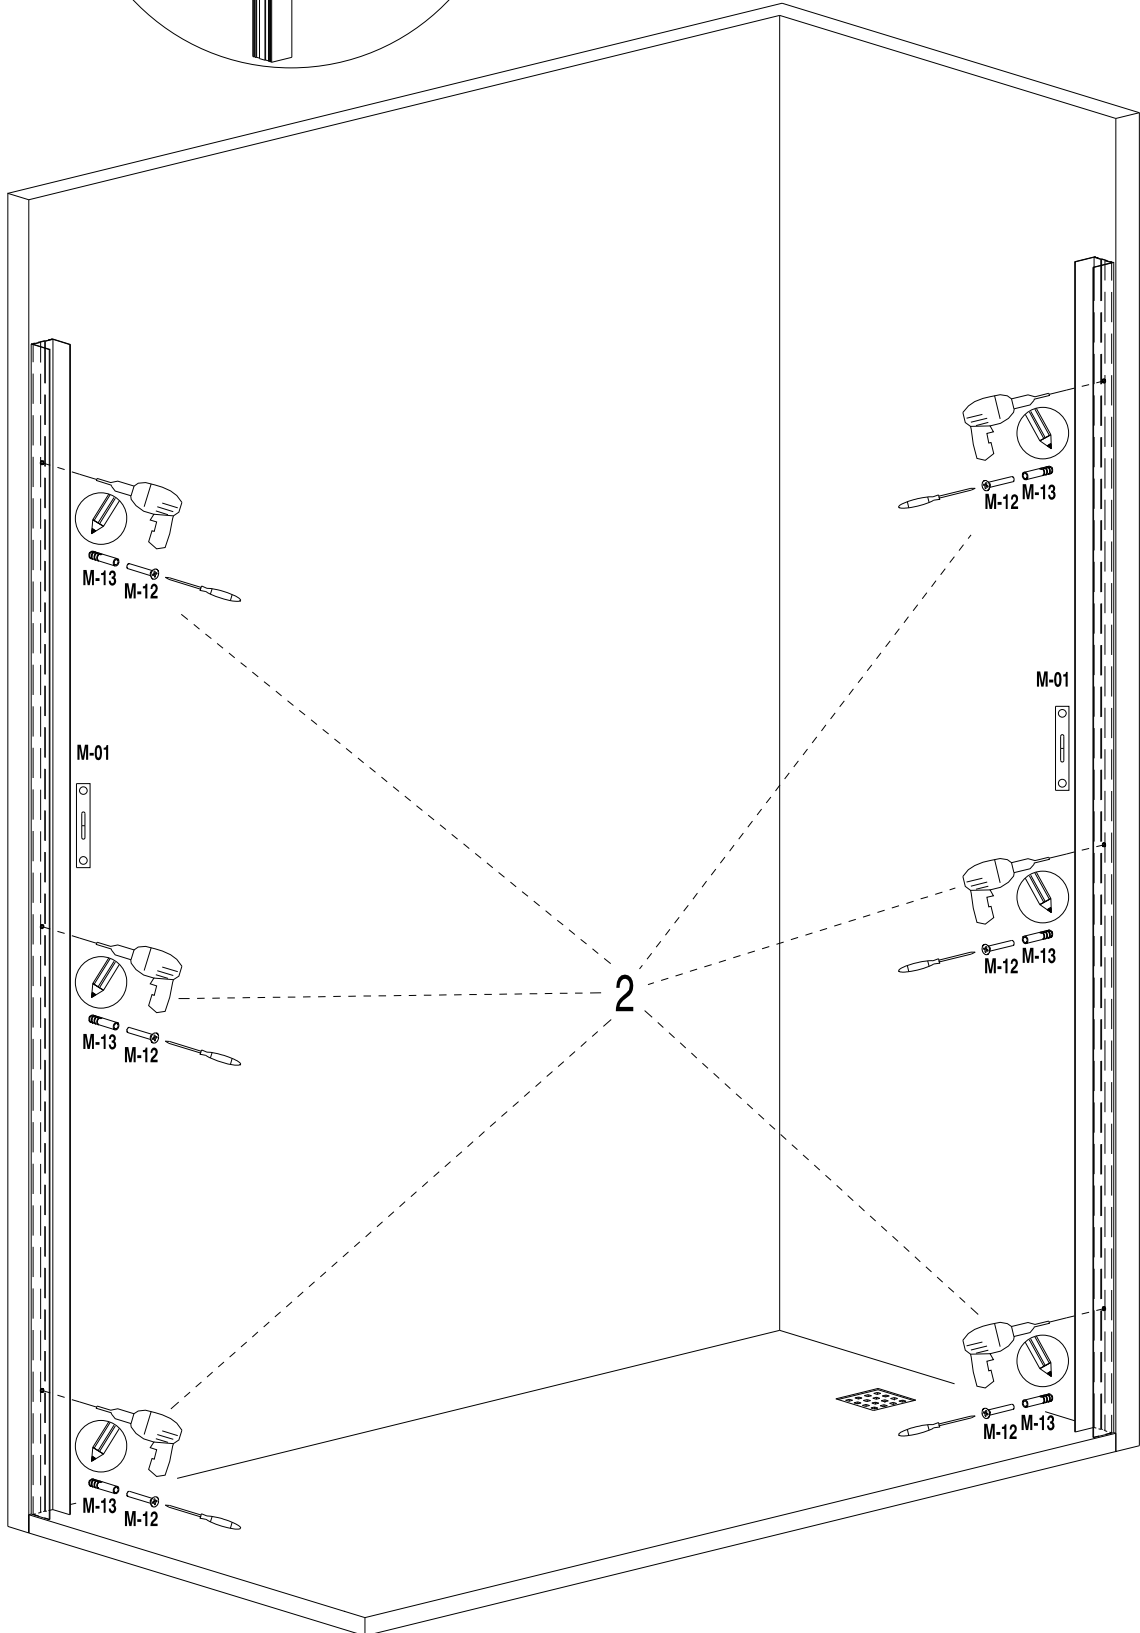
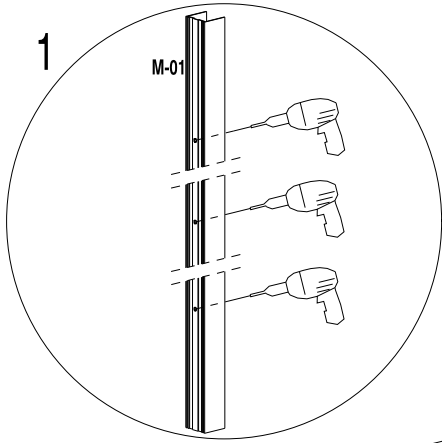


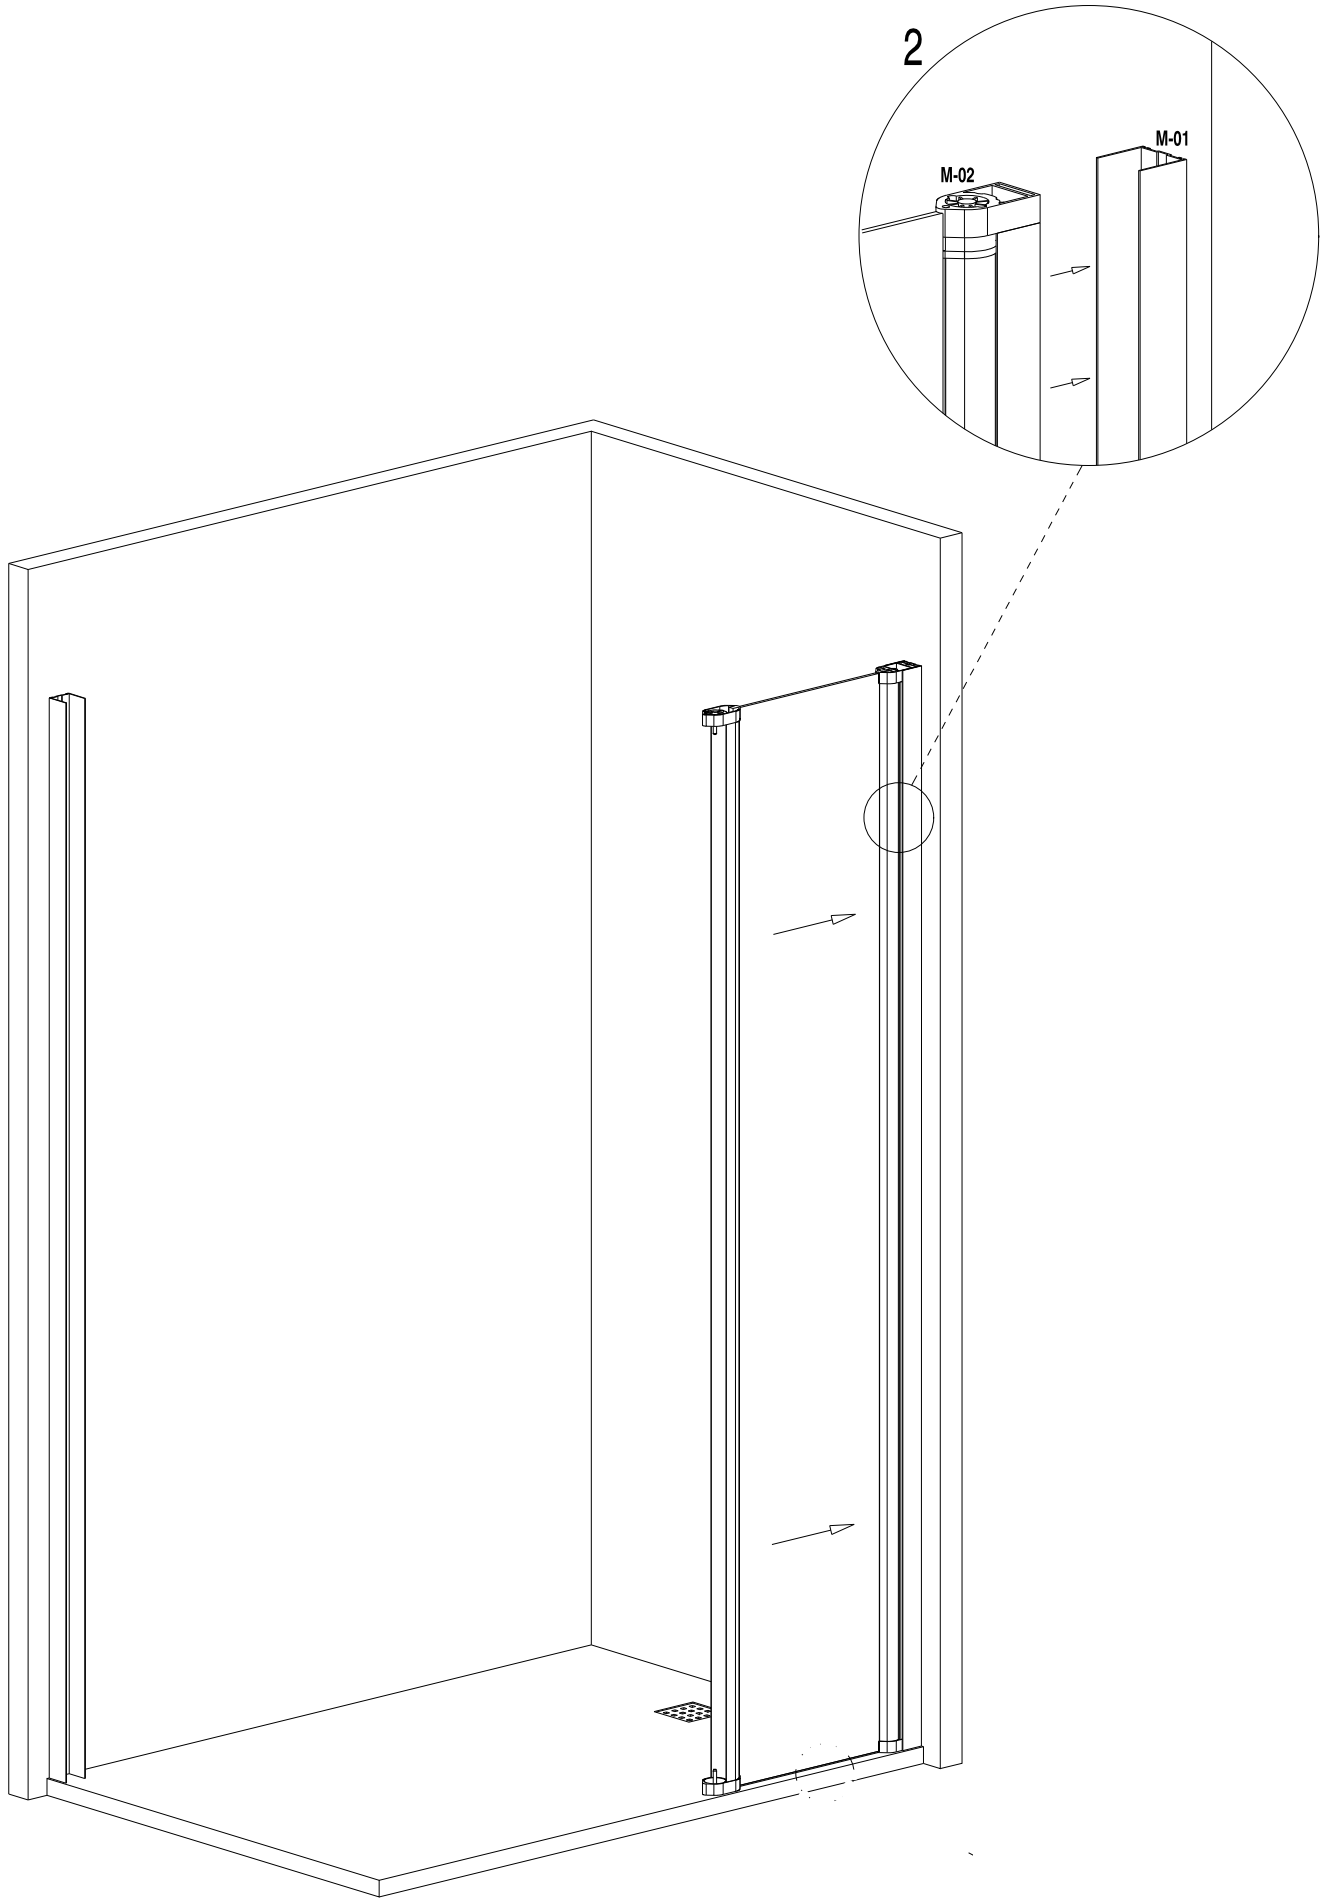

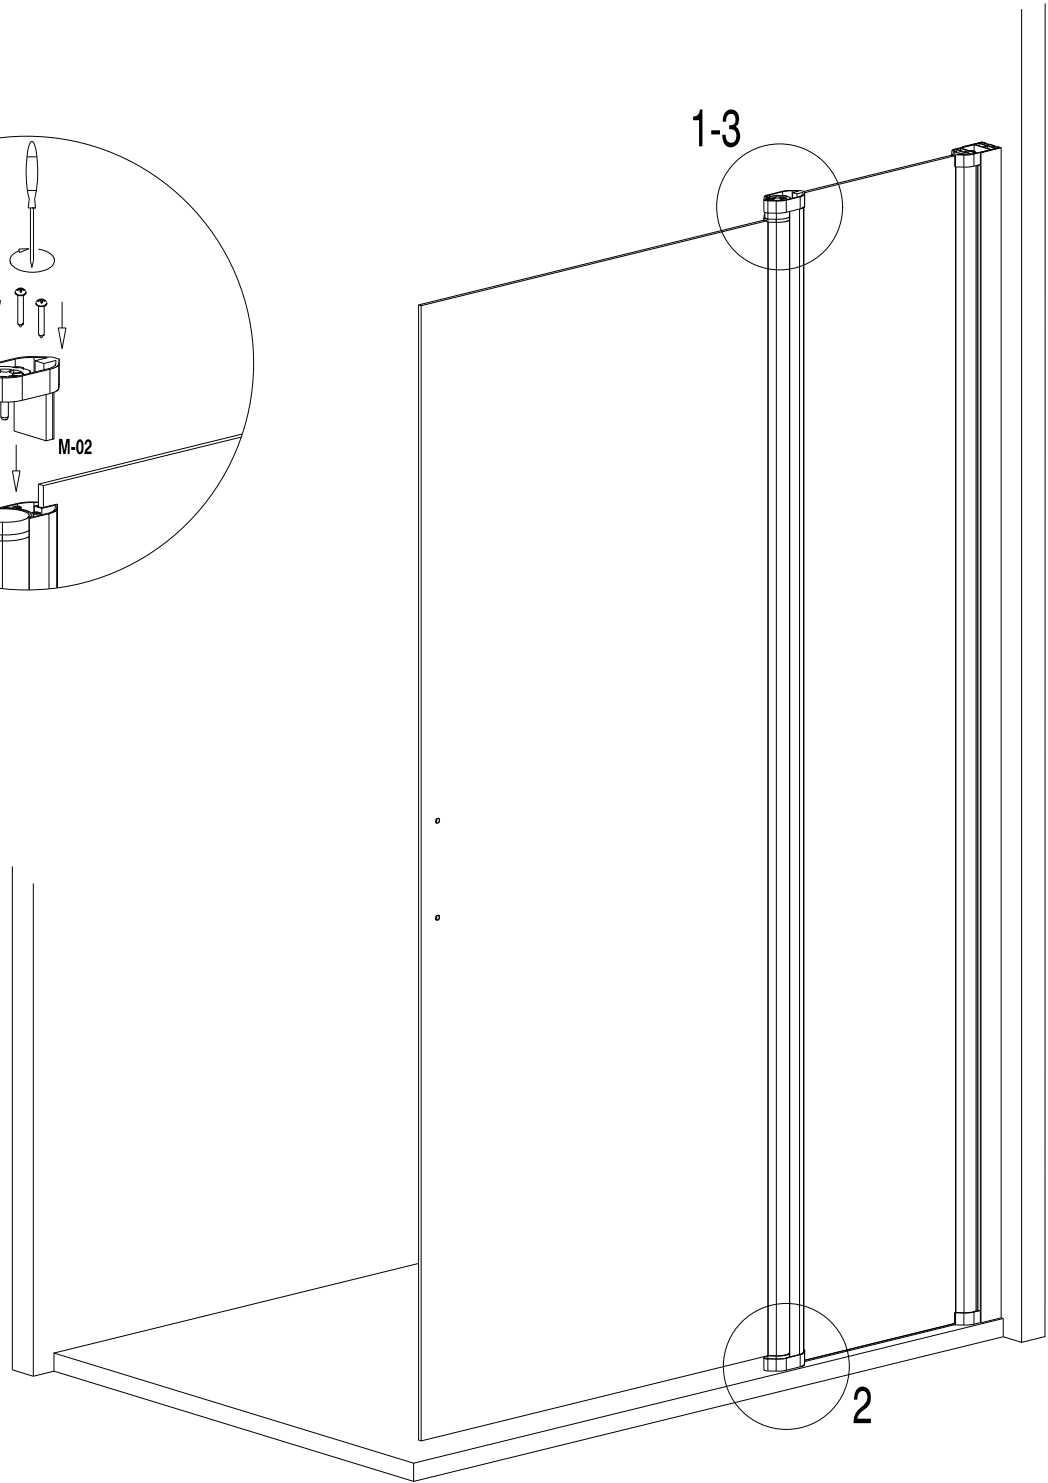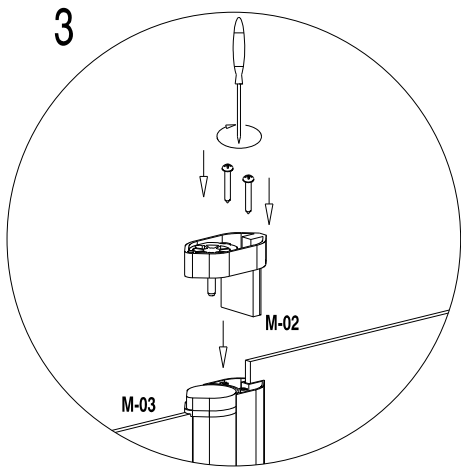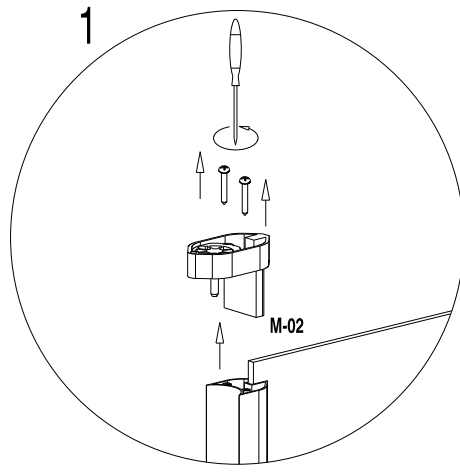
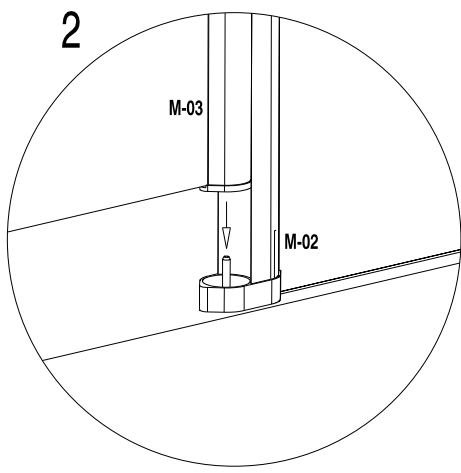



2



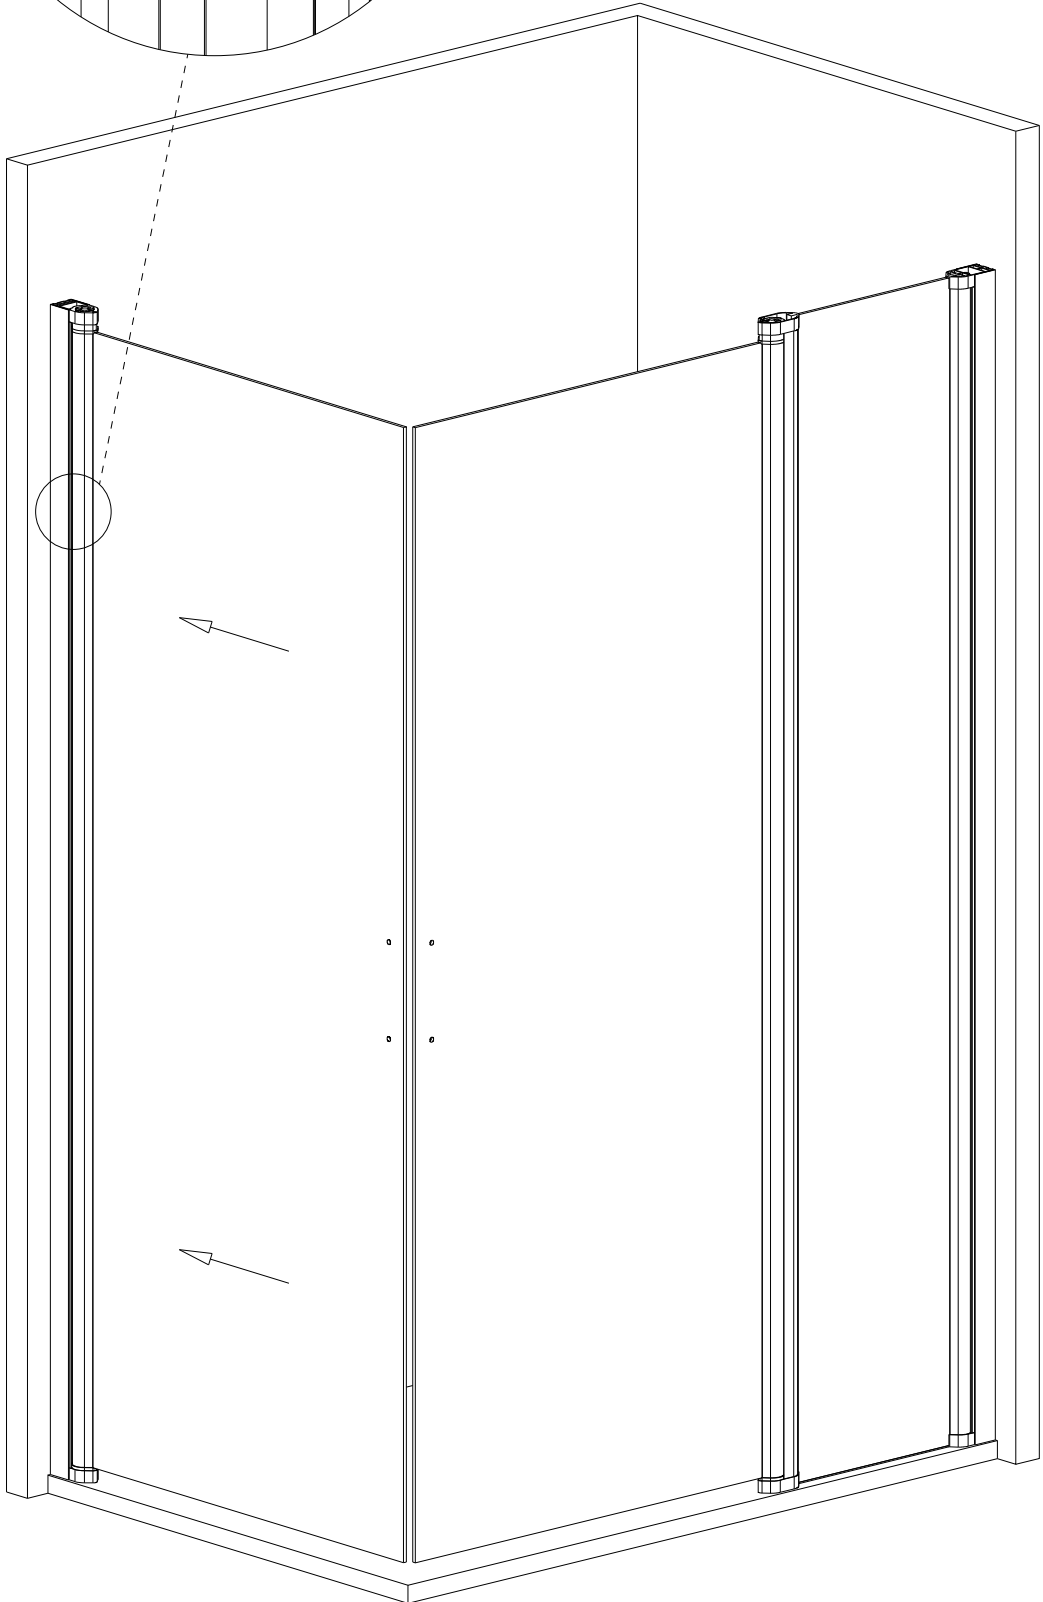
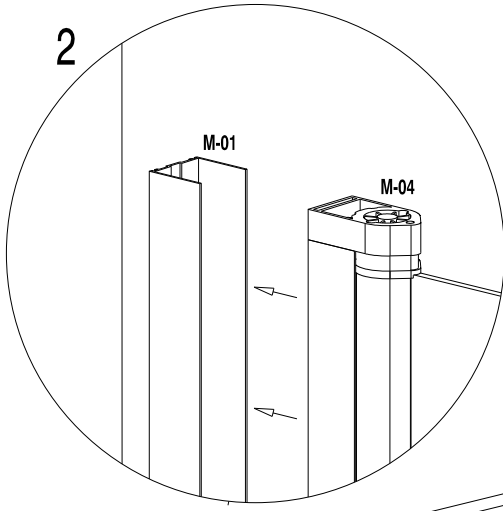


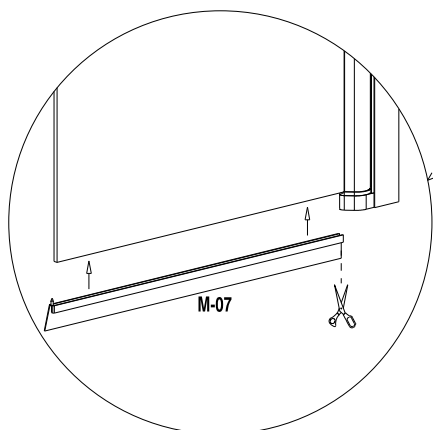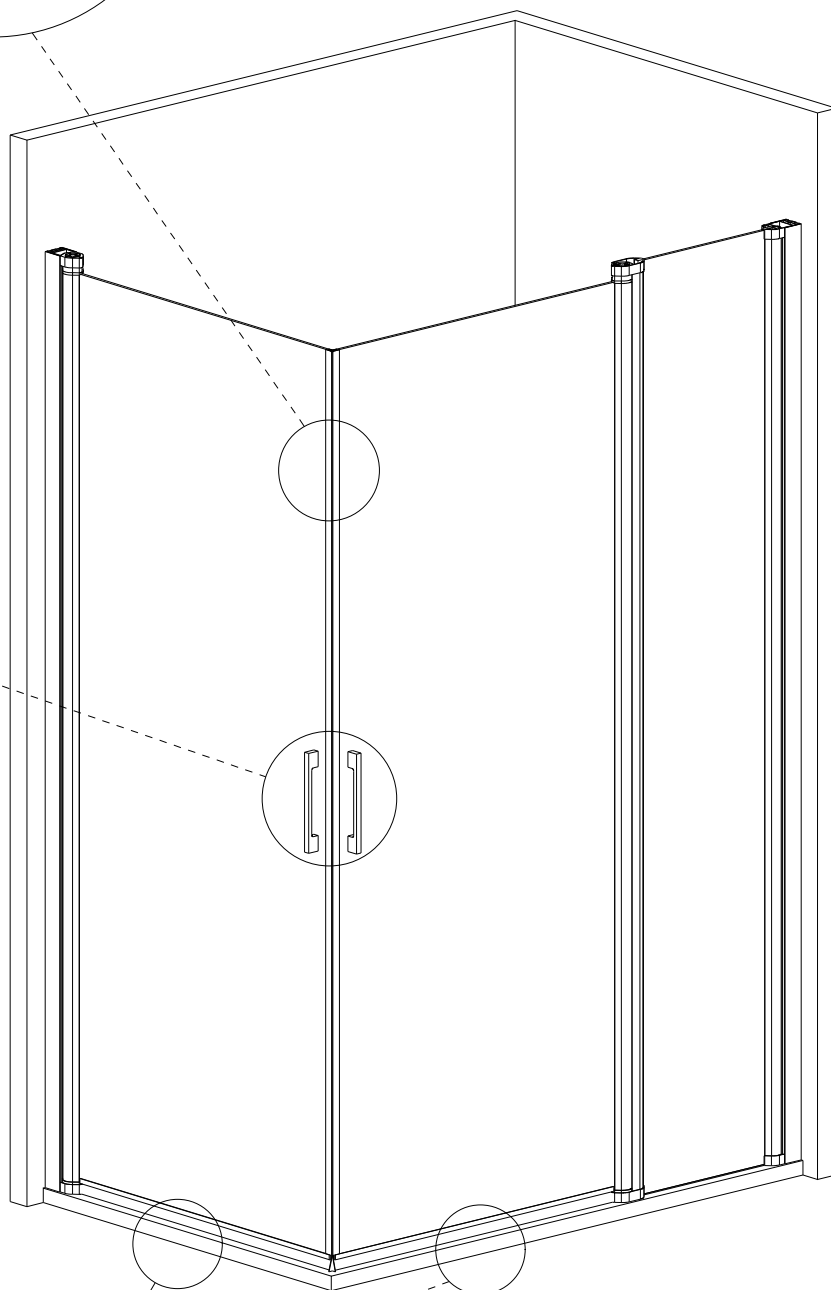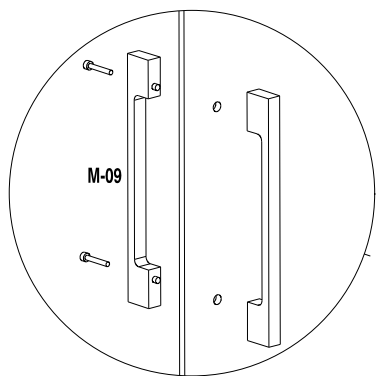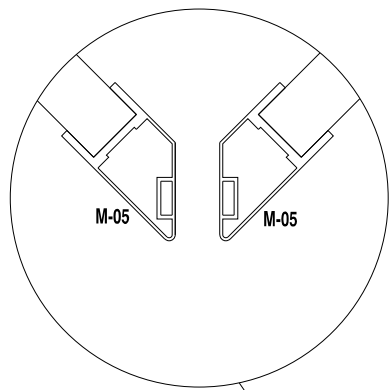



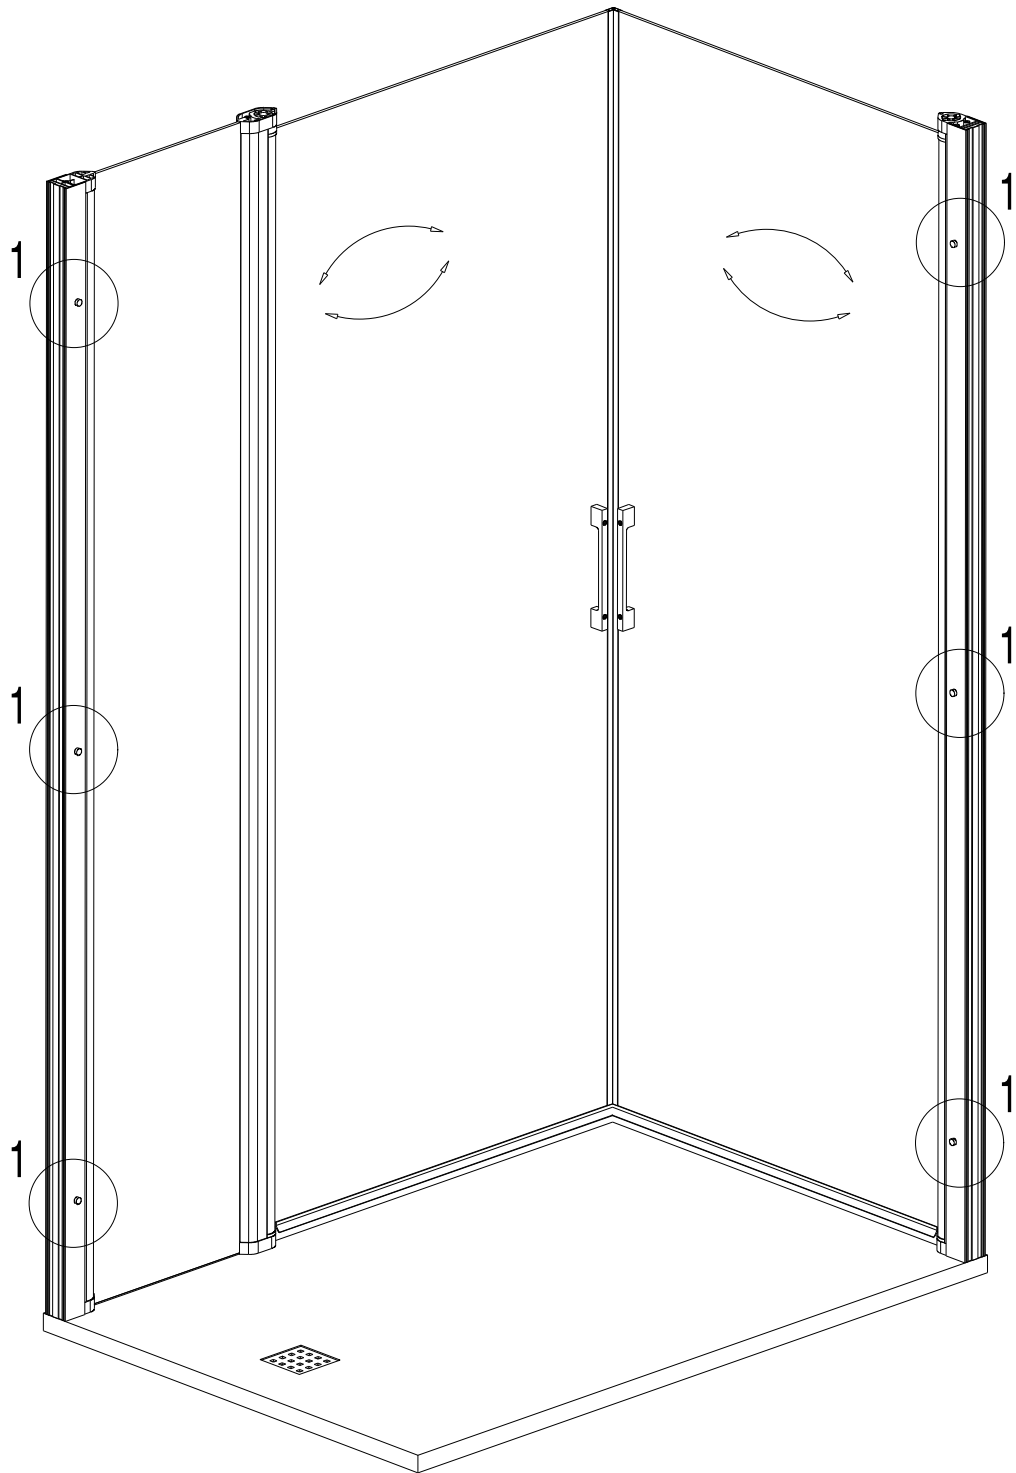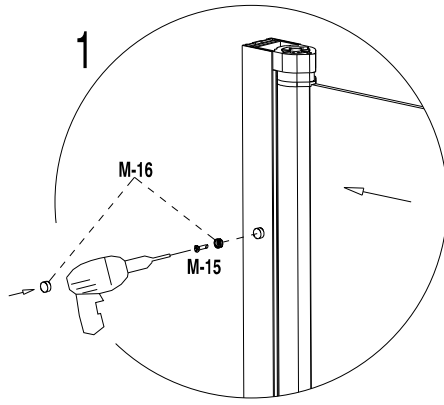

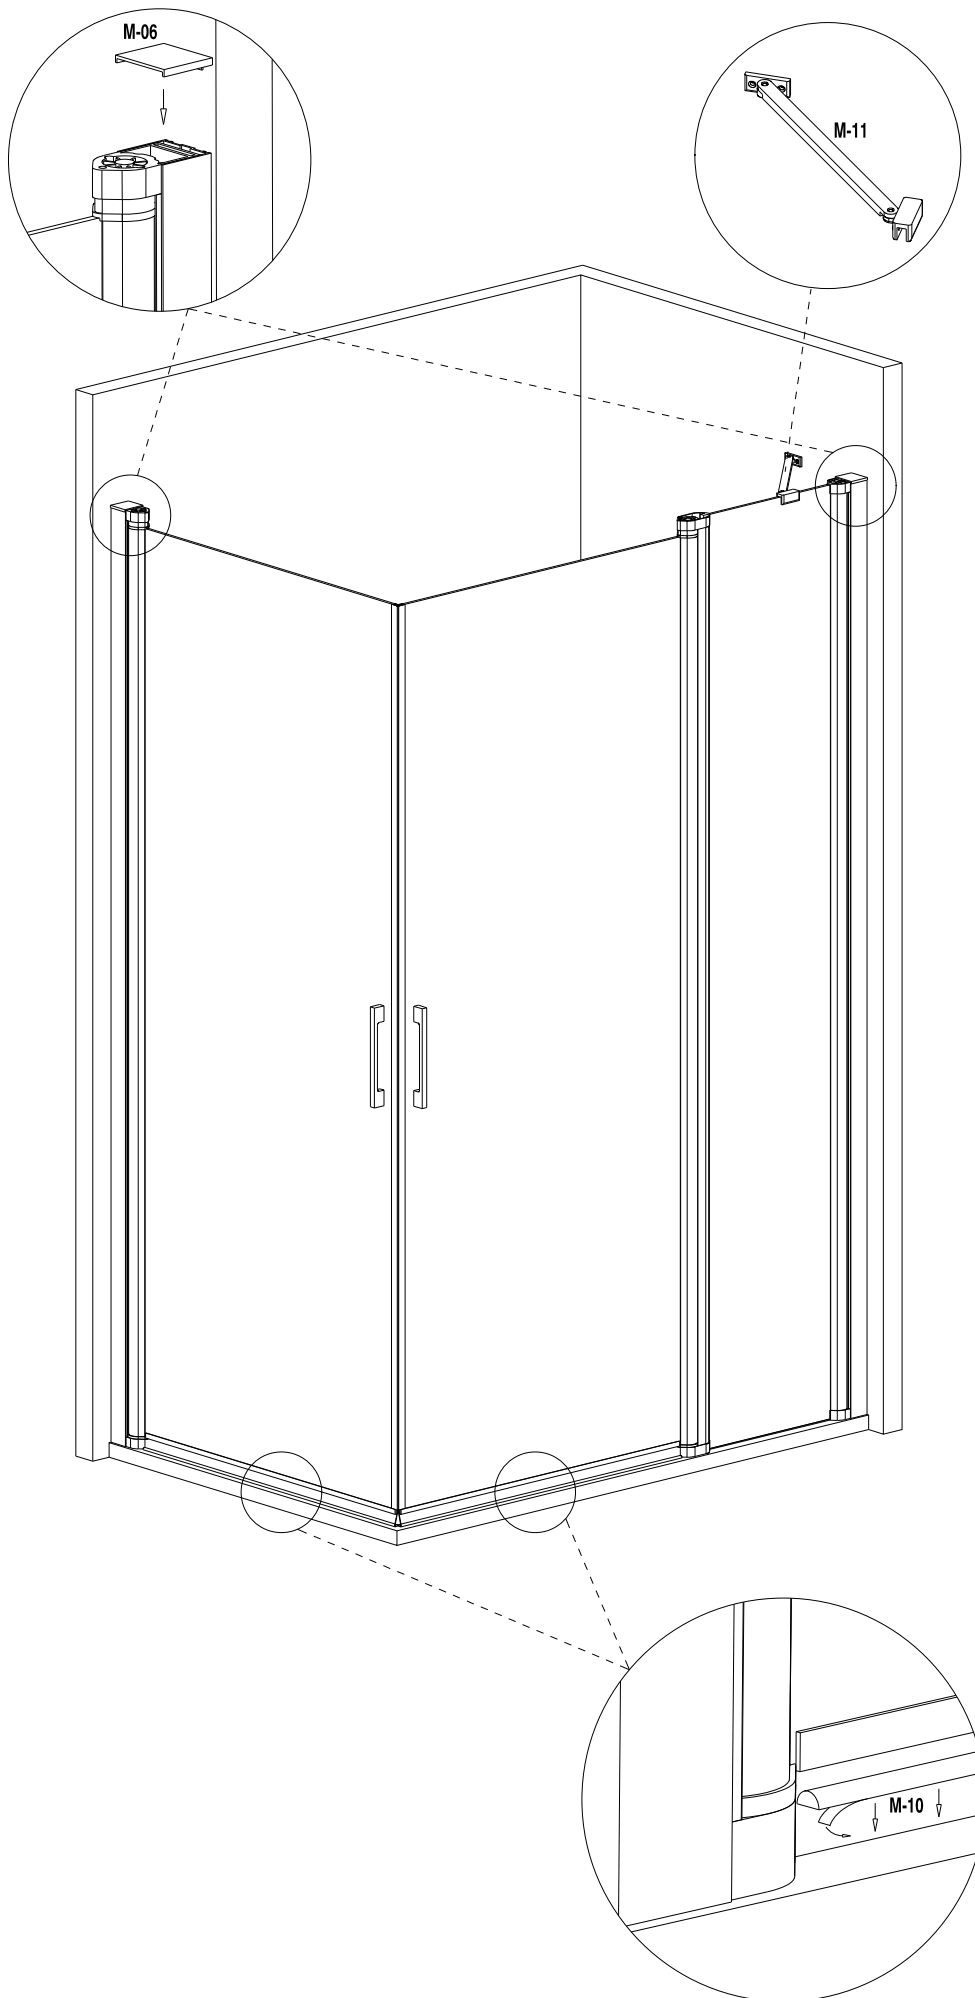

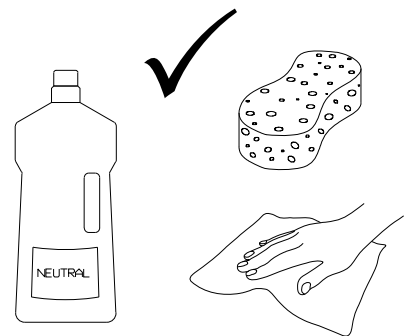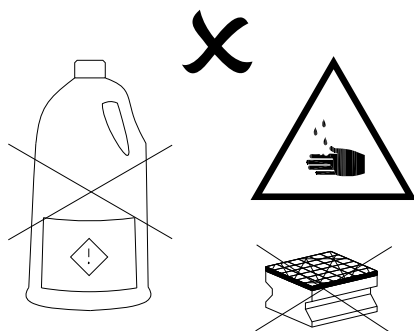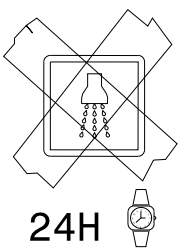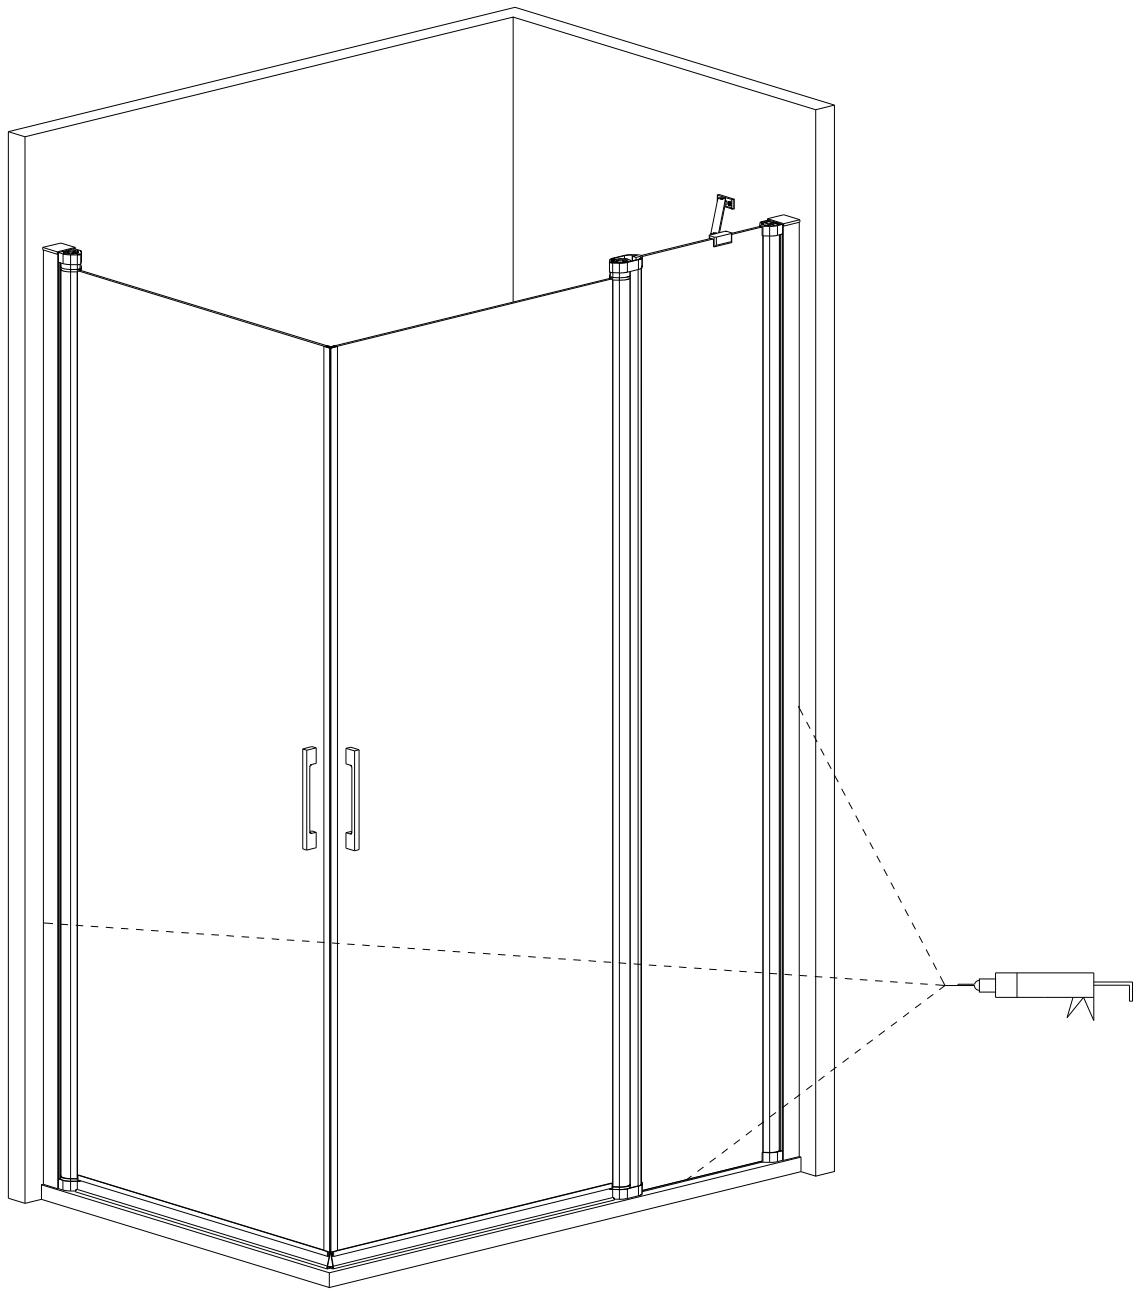



**EUROPEAN SYSTEMS SERVICES**  
**contact@expertbath.com**



13

UNE-EN 14428

