



// MAMPARA DE BAÑO // PAROIS DE DOUCHE // SHOWER ENCLOSURE //
// CABINA DOCCIA // DUSCHABTRENNUNG // RESGUARDO DE DUCHE //


FURO P30

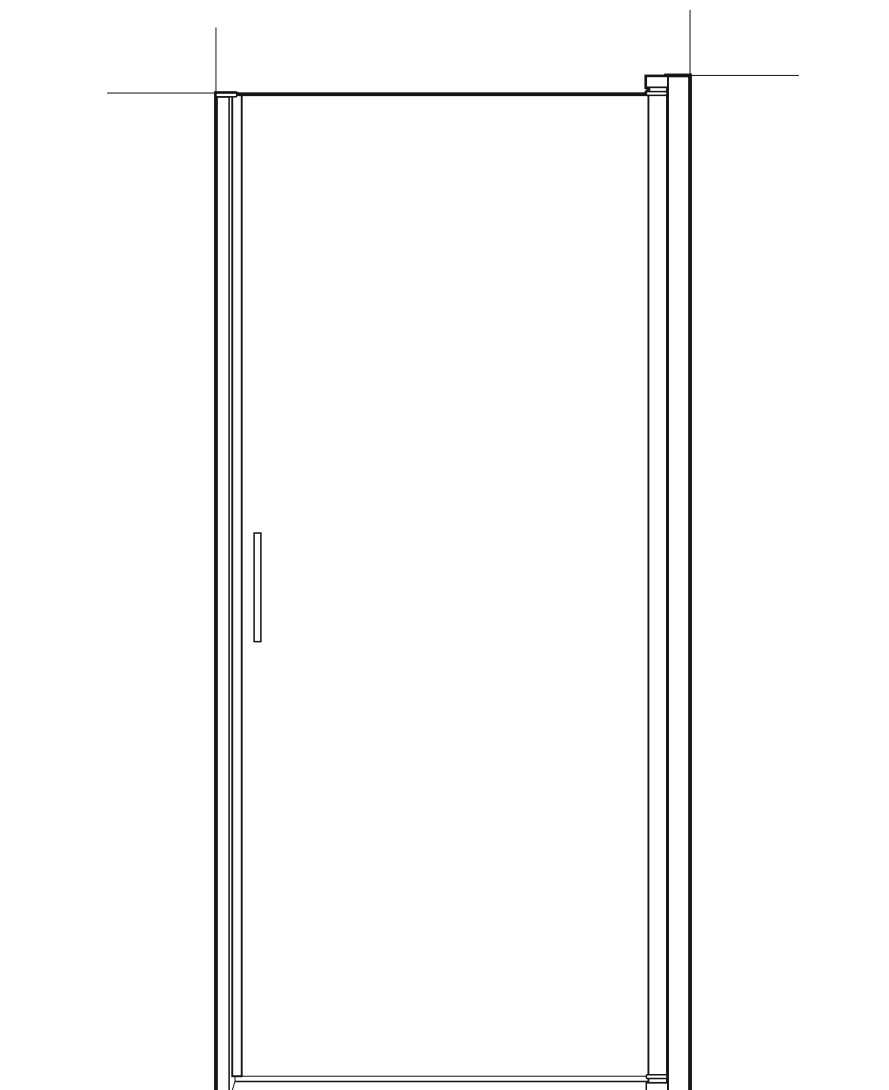

A

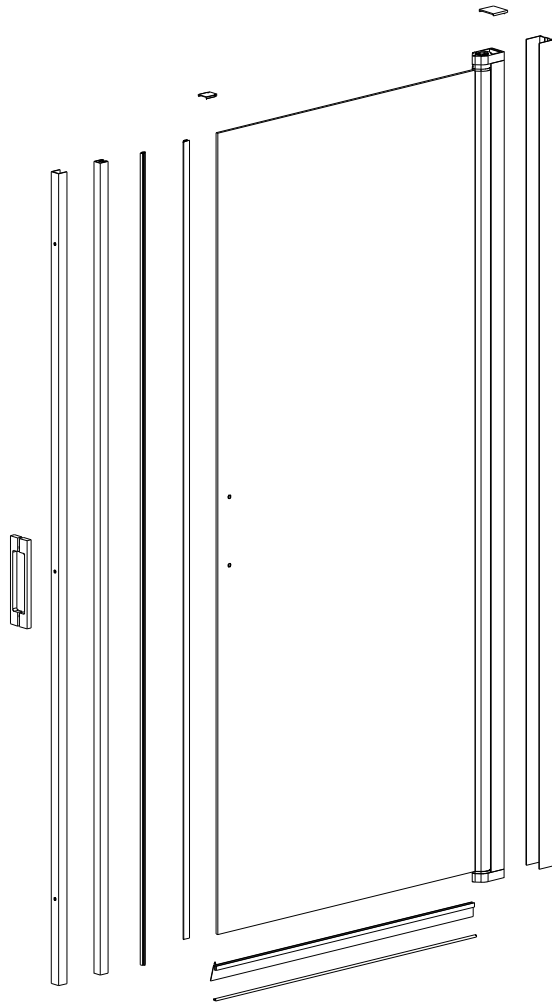





B


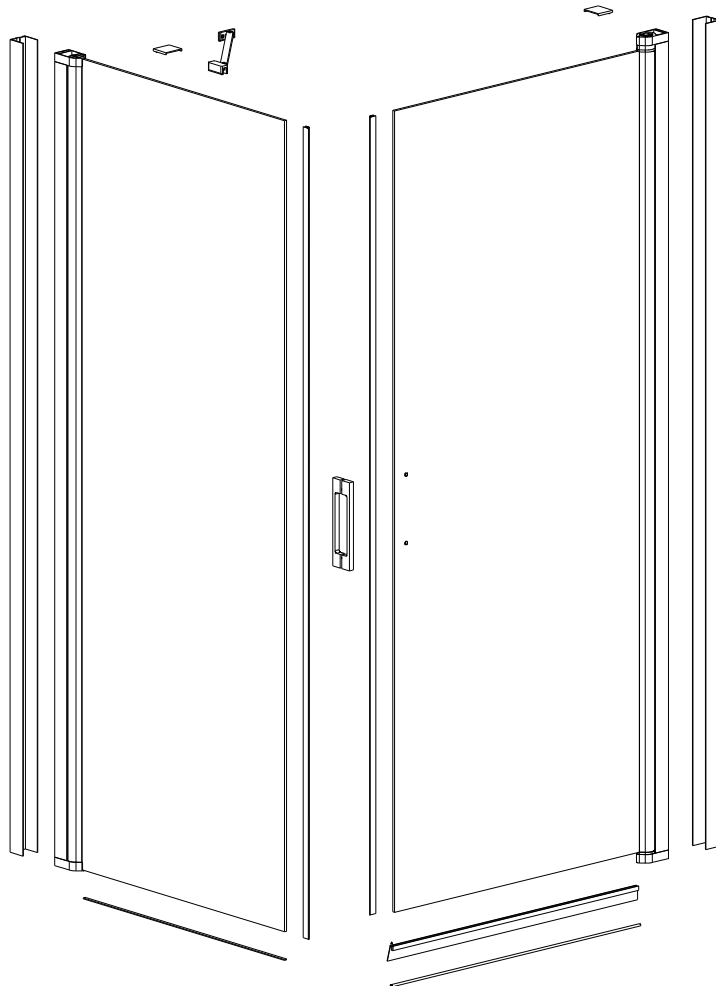


			A					
M-01		1				M-02		1
M-03		1				M-04		1
M-05		1				M-06		1
M-07		1				M-08	 DIN 7981 4,2x32	6
M-09	 $\varnothing 6$	6				M-10		6
M-11	 3,5x16	6				M-12		1
M-13		1				M-14		1
M-15		1						




			B					
M-01		2				M-02		1
M-03		2				M-04		2
M-05		1				M-06		1
M-07		1				M-08	 DIN 7981 4,2x32	6
M-09	 $\varnothing 6$	8				M-10		6
M-11	 3,5x16	6				M-16	 DIN 7982 4,2x32	2
M-17		1				M-18		1
M-19		1						

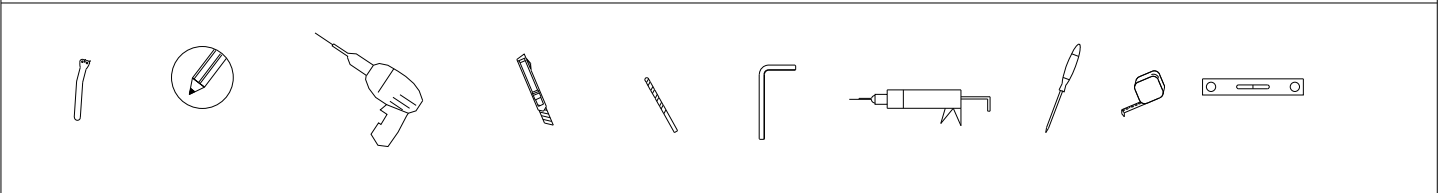





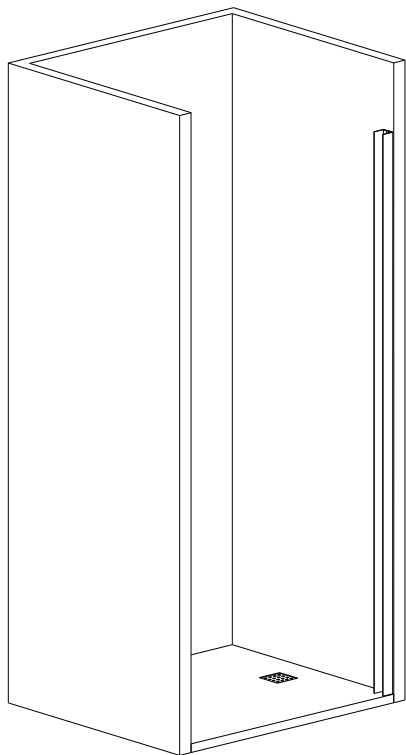
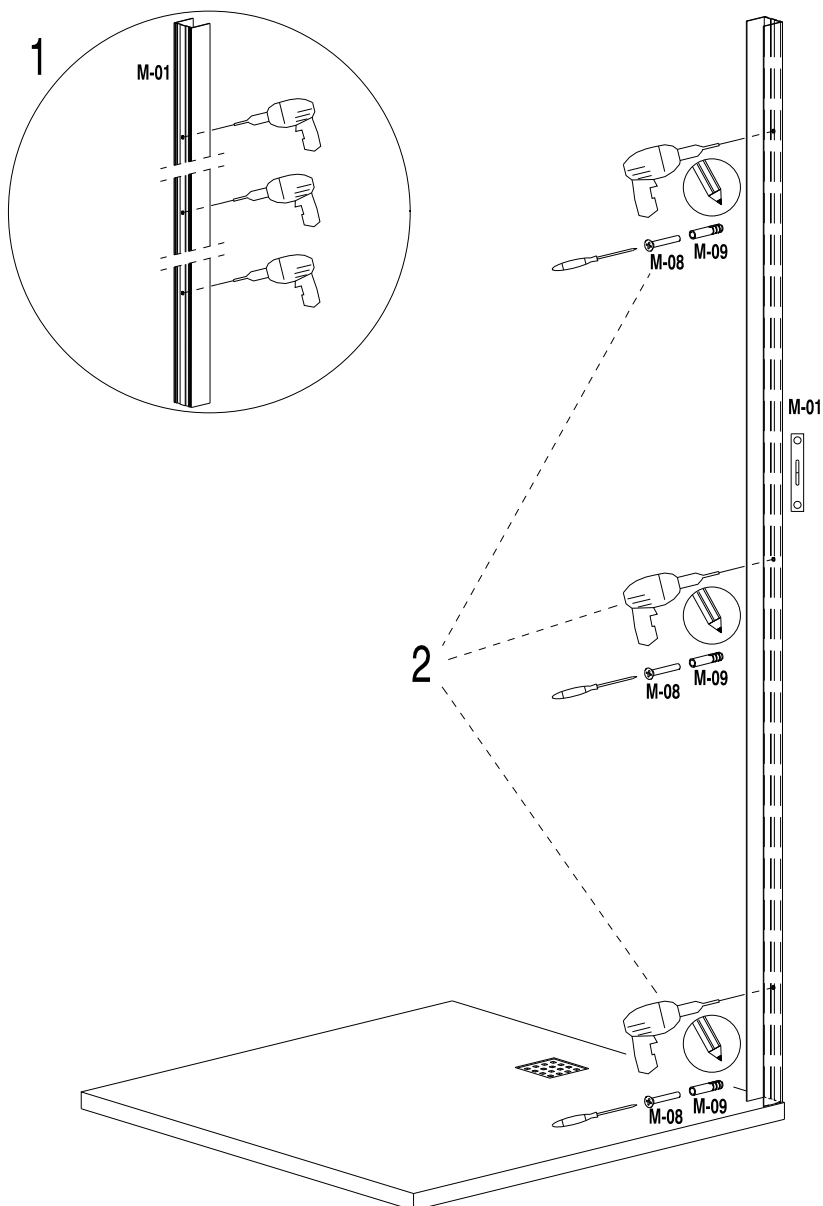
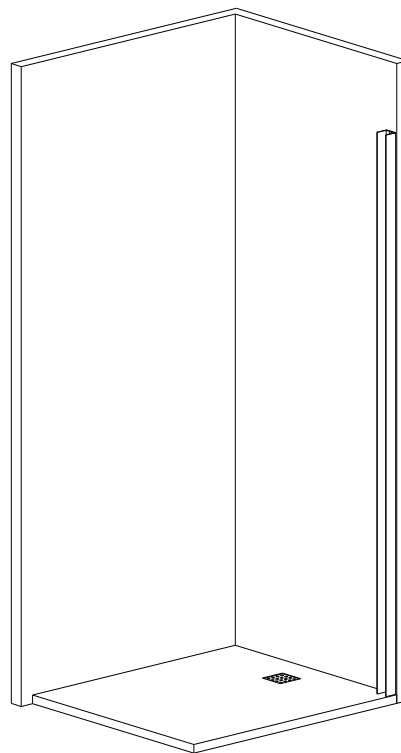
A**B**

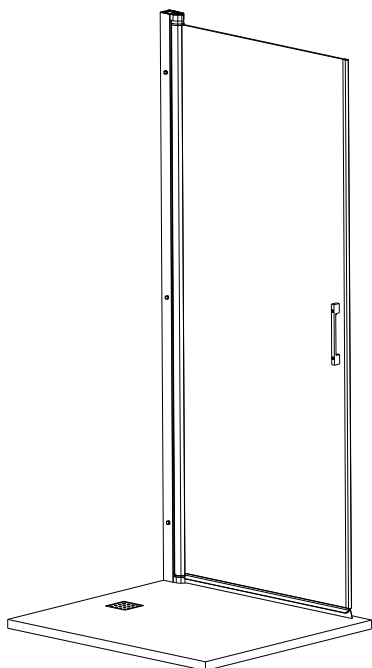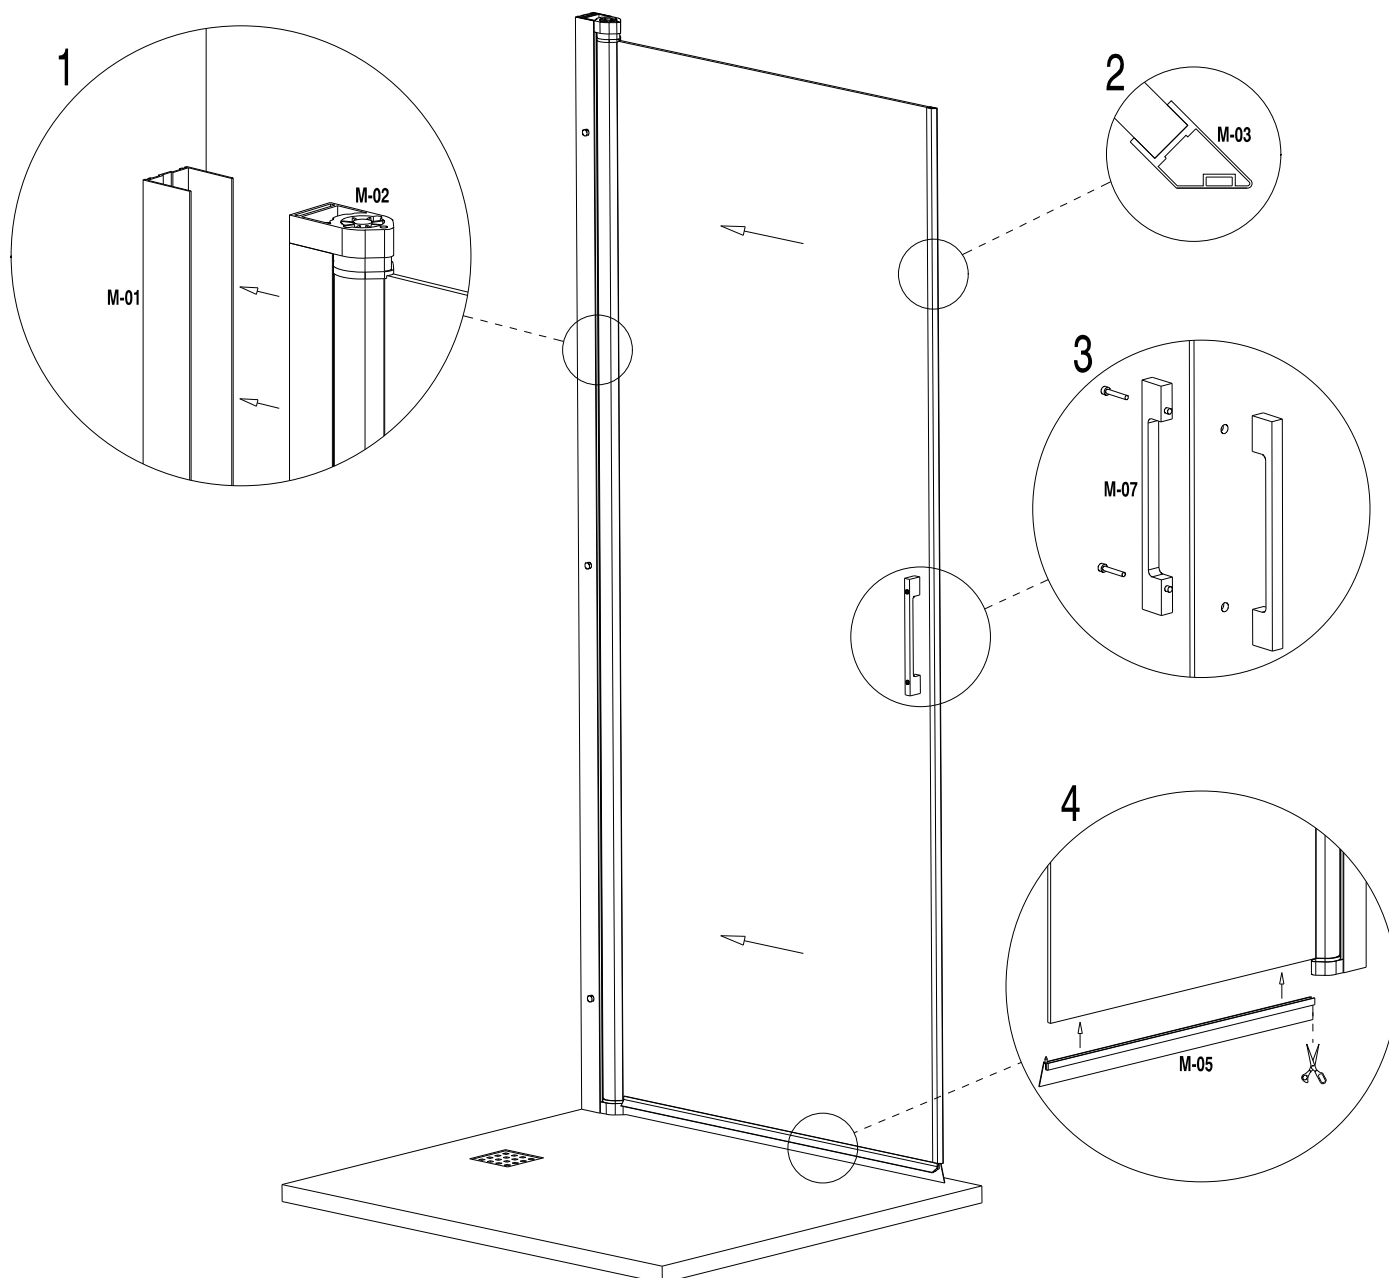A**B**




A

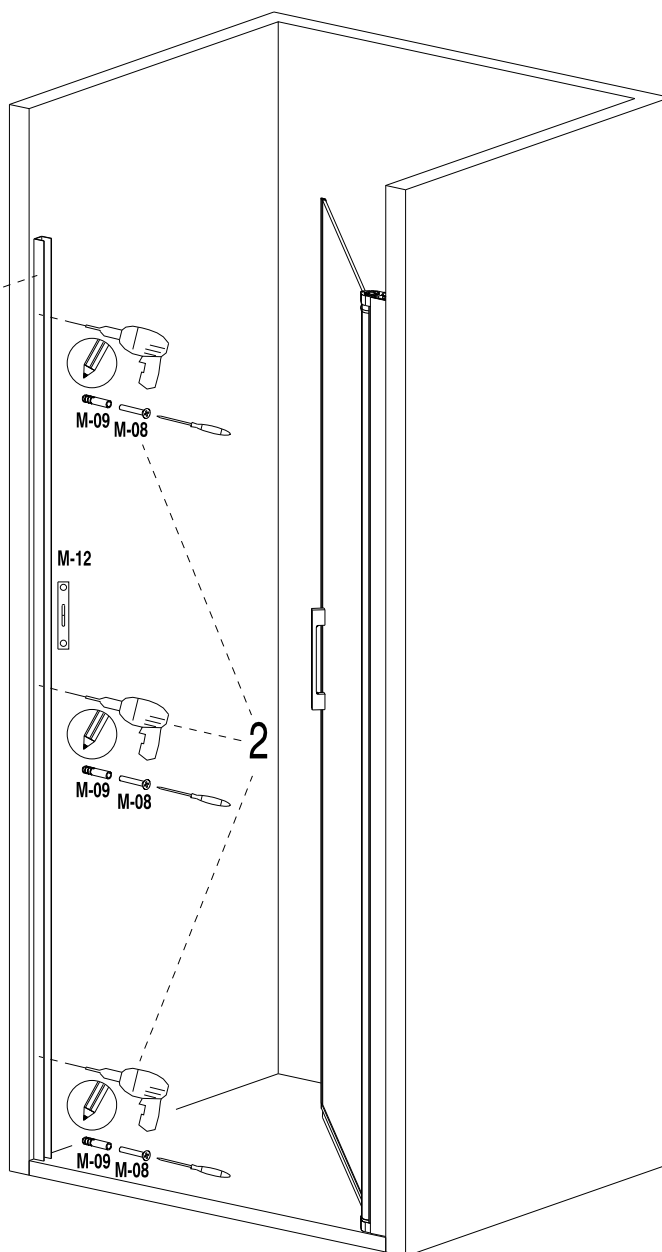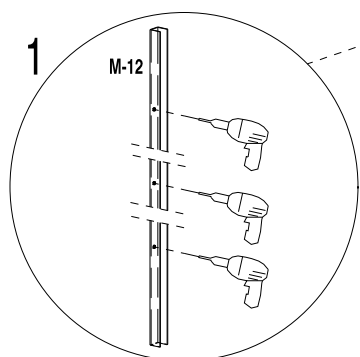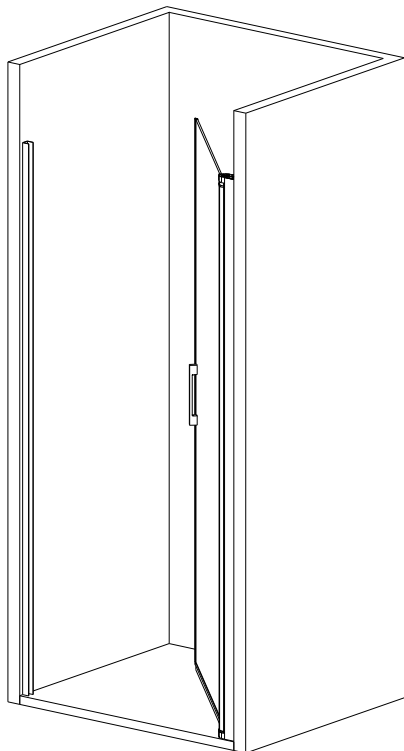



A

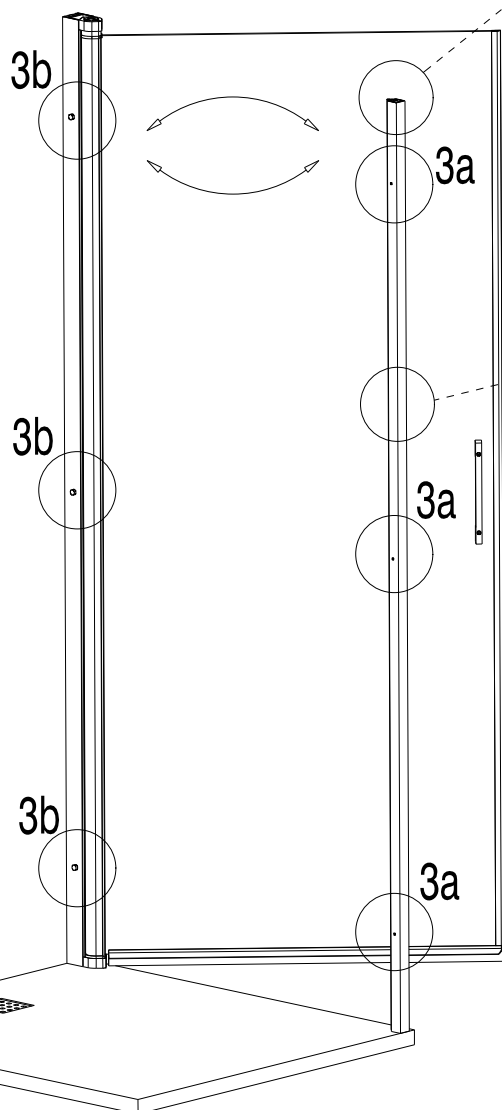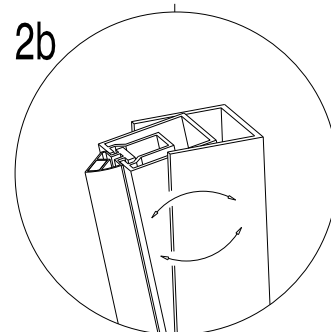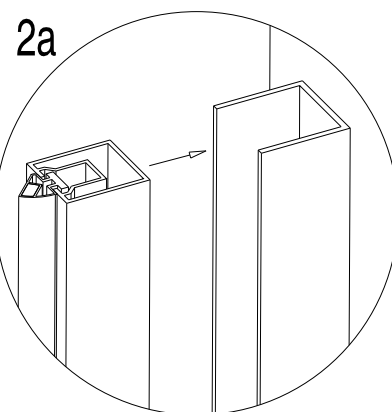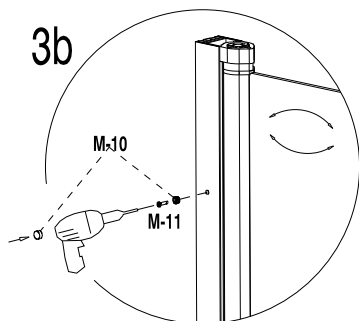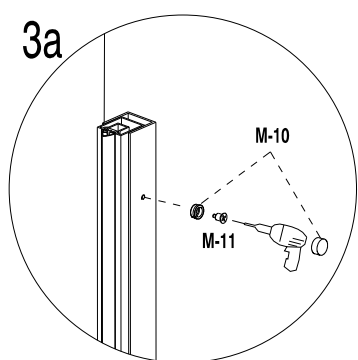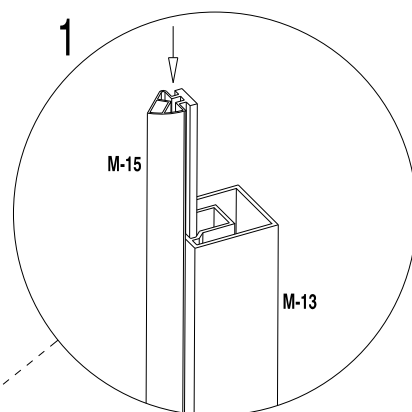
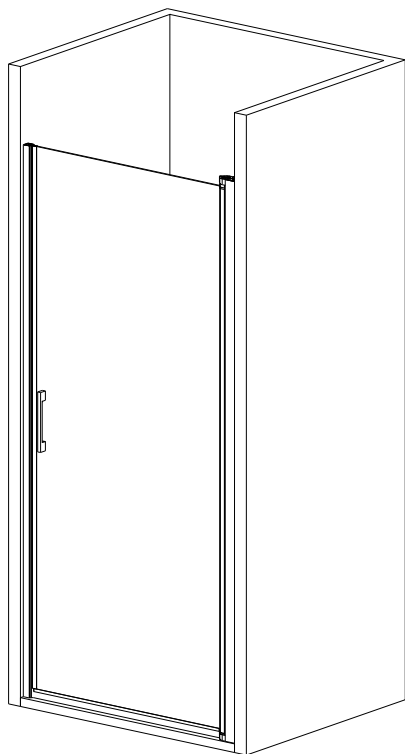


B

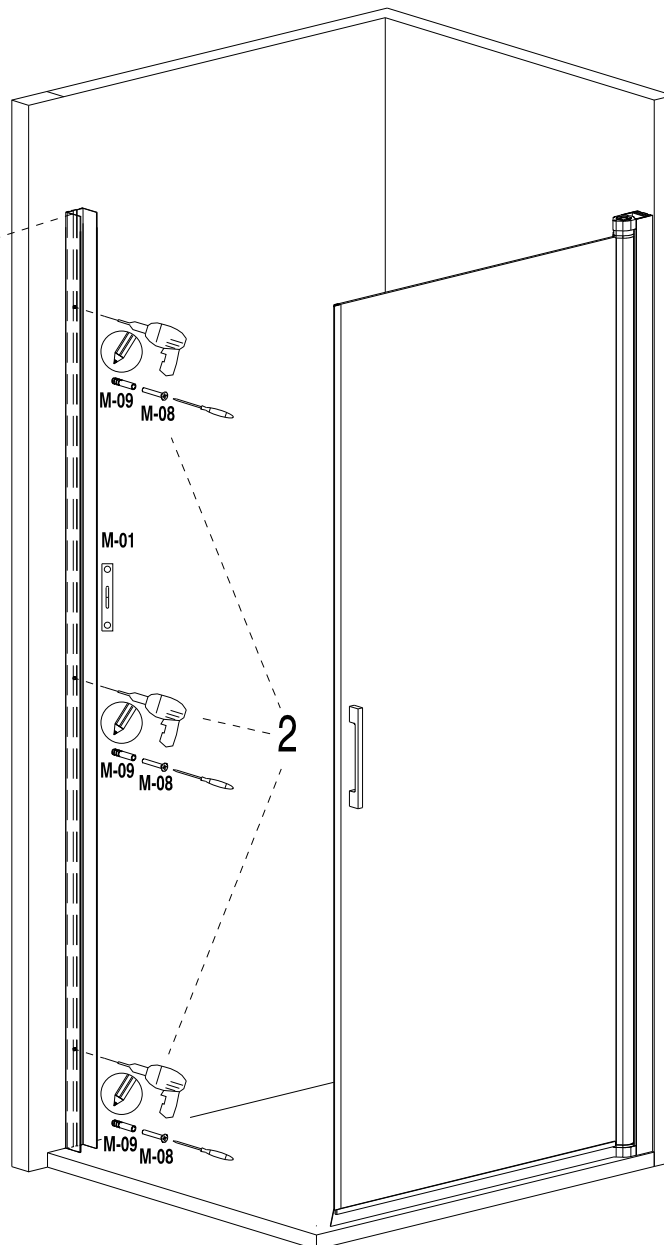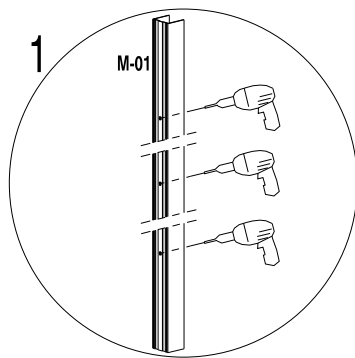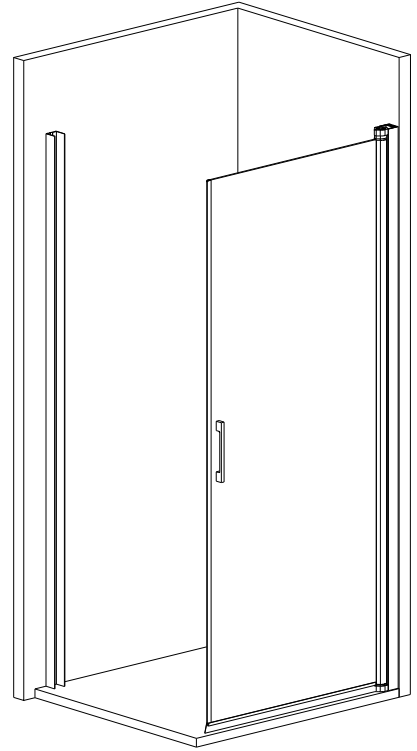


B



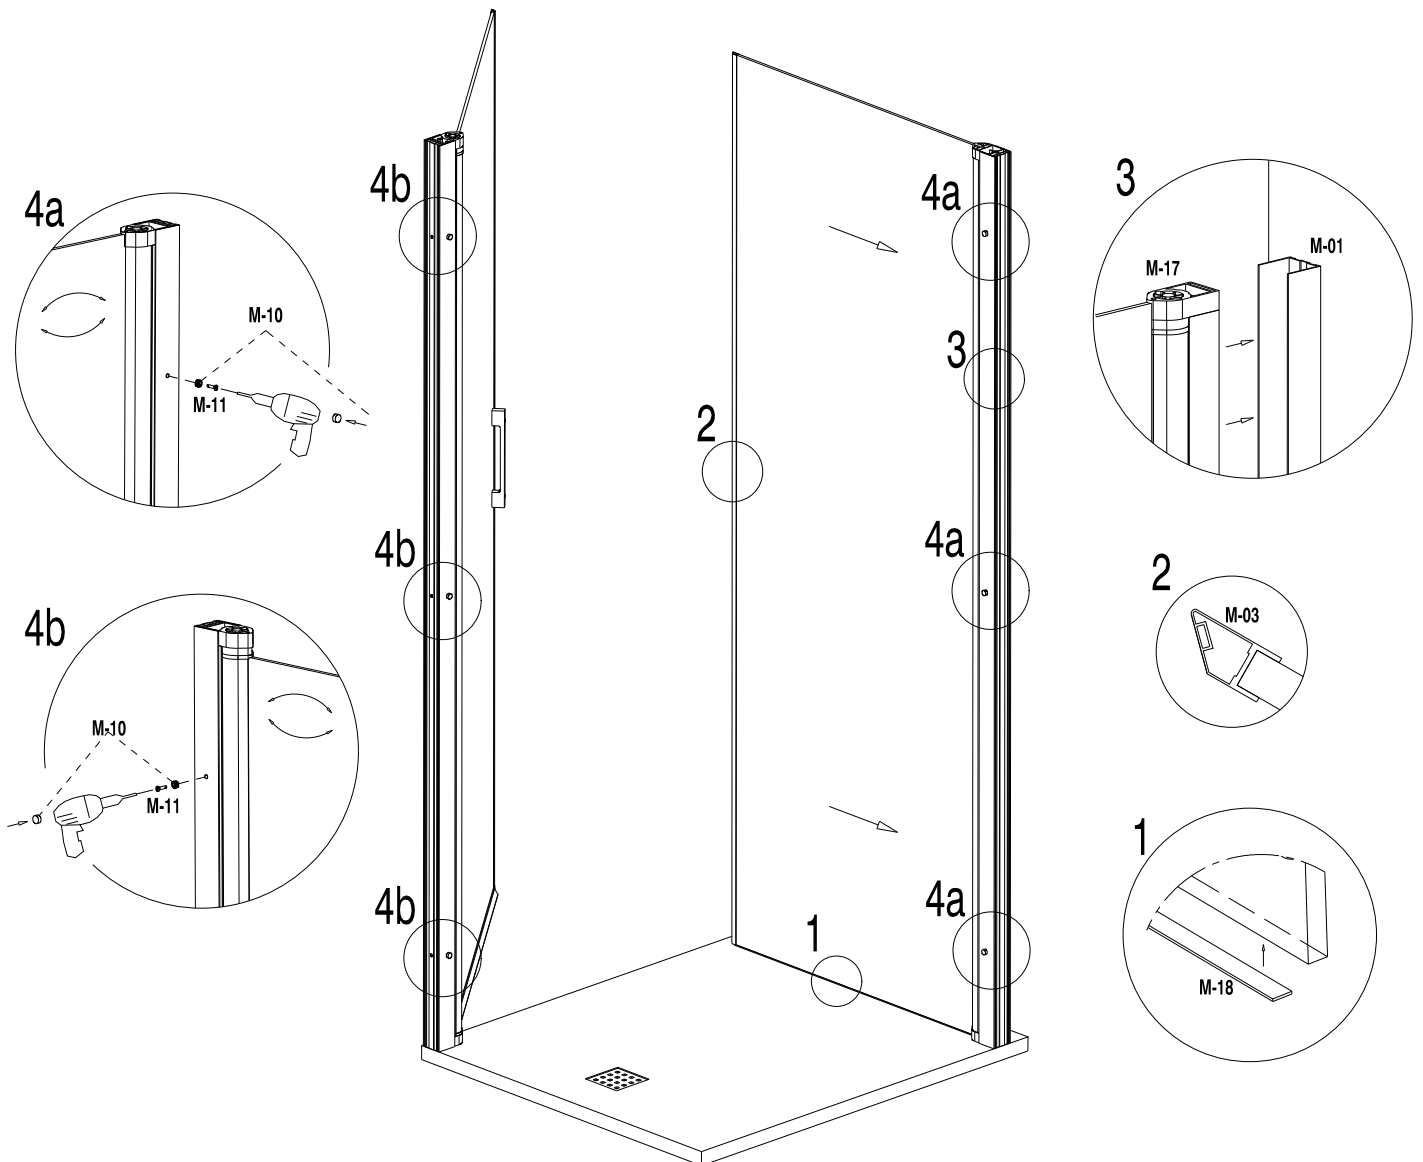
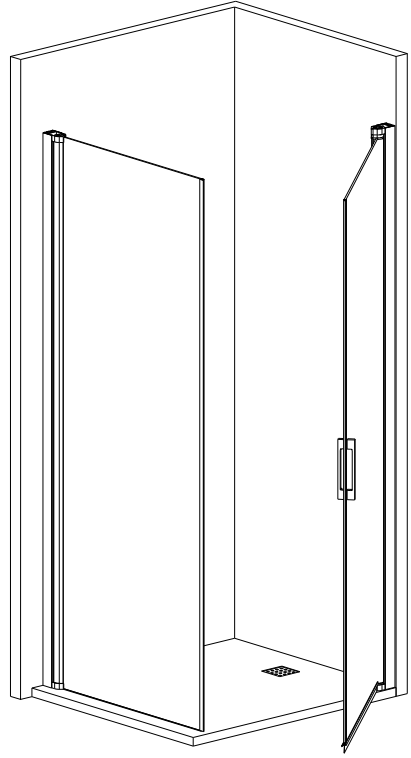


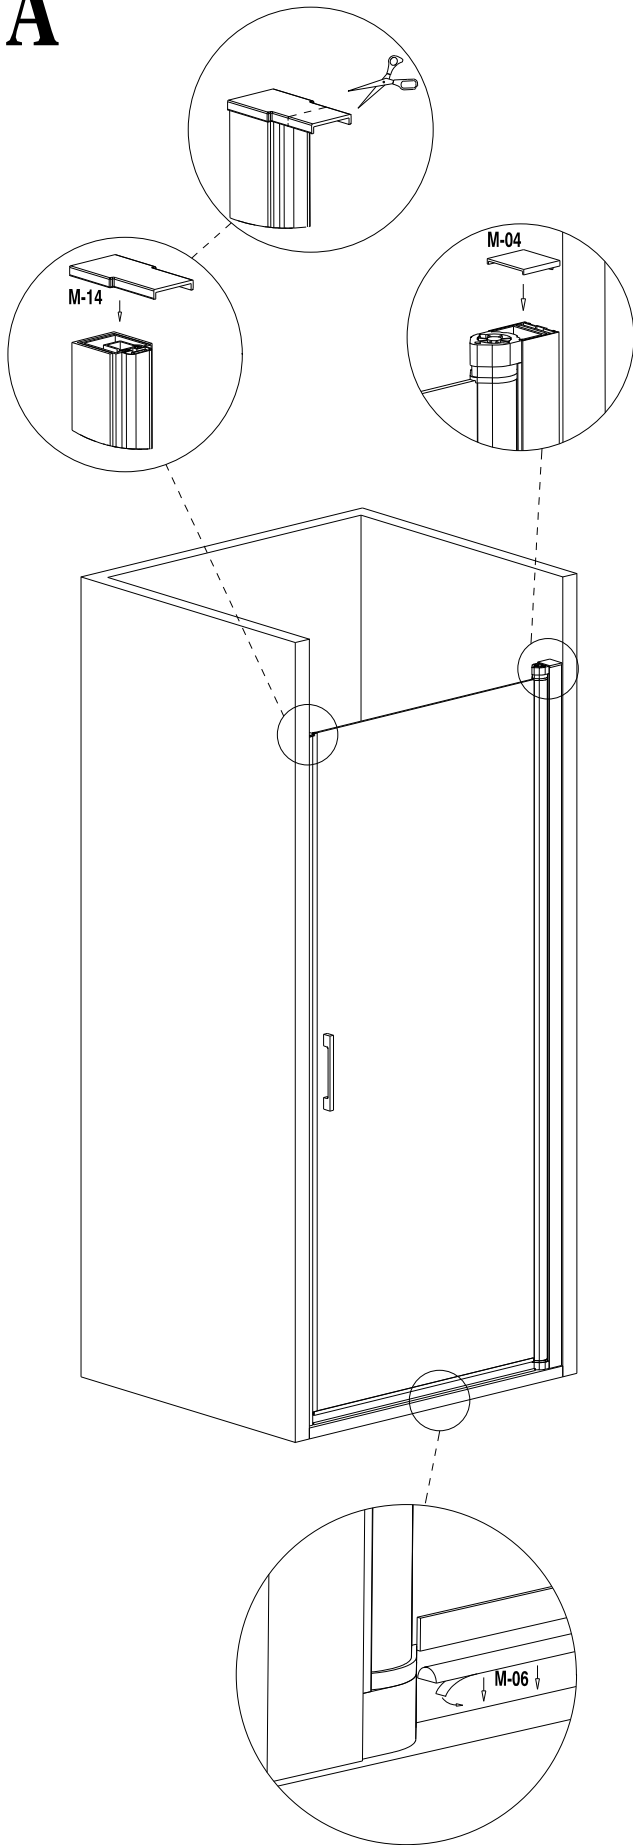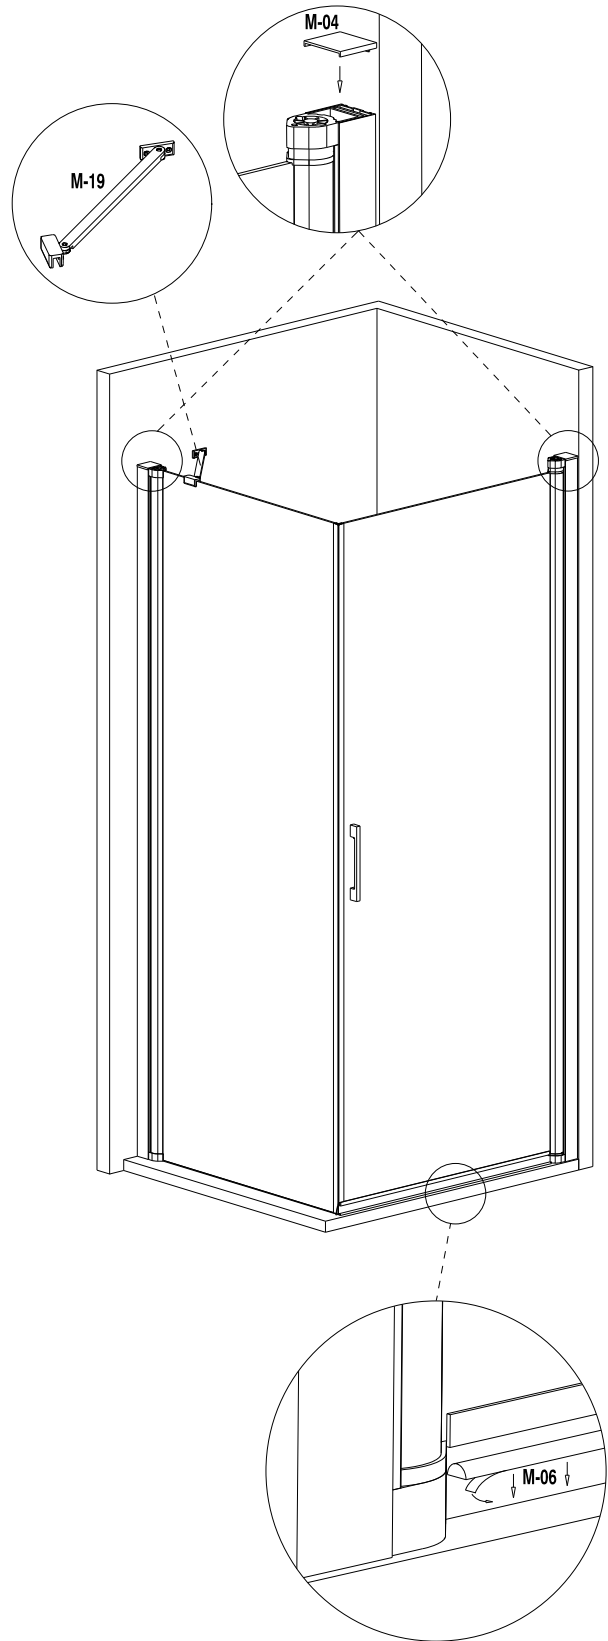A**B**

A

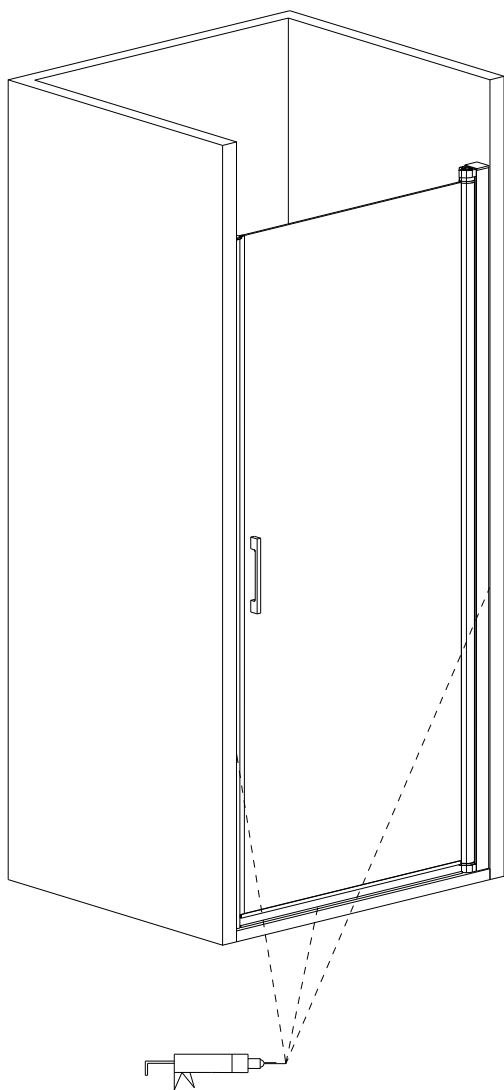

B

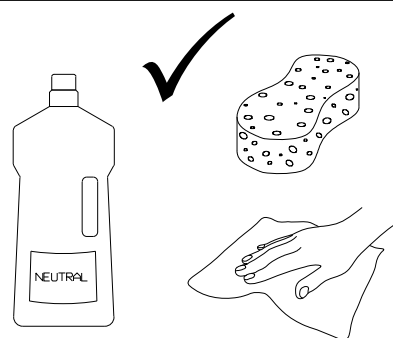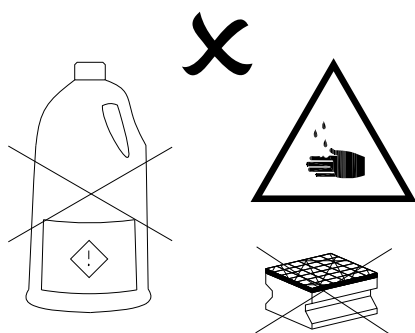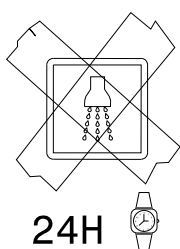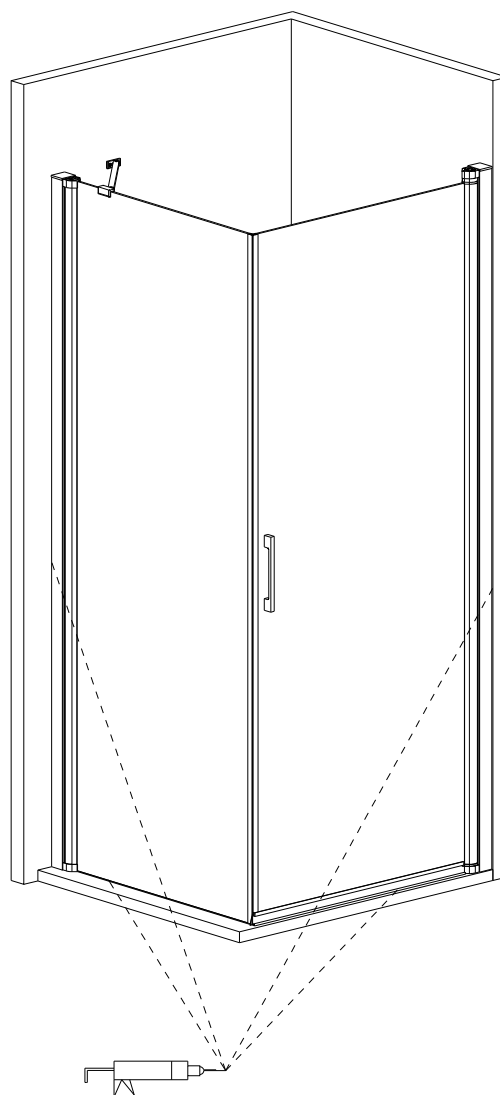



EUROPEAN SYSTEMS SERVICES
contact@expertbath.com



13

UNE-EN 14428

